


14 INSTALACIÓN DE LAS PUERTAS DOOR INSTALLATION



Chazo Mariposa/ Taquete
+ Tornillo ensamble
/ Plastic wall anchor



SE SUGIERE ANCLAJE A PARED
MEDIANTE CHAZO+TORNILLO
DE ENSAMBLE (NO INCLUIDOS) /
FIXING THE CABINET TO THE
WALL ITS SUGGESTED WITH
PLASTIC WALL ANCHOR +
DRYWALL SCREW
(NOT INCLUDED)

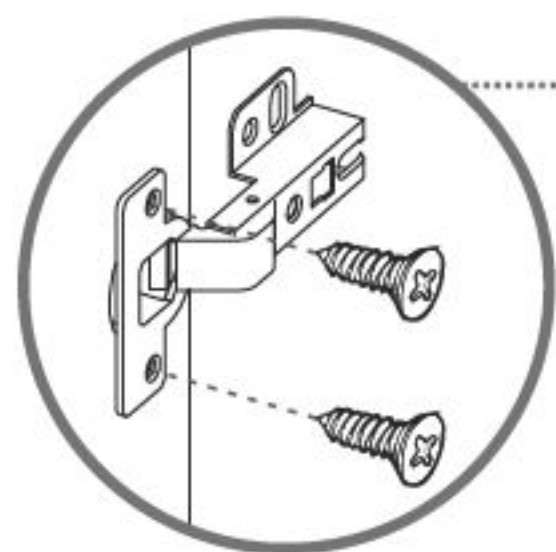


UBICAR EL ENTREPAÑO
MOVIL / PLACE THE
MOBILE SHELF

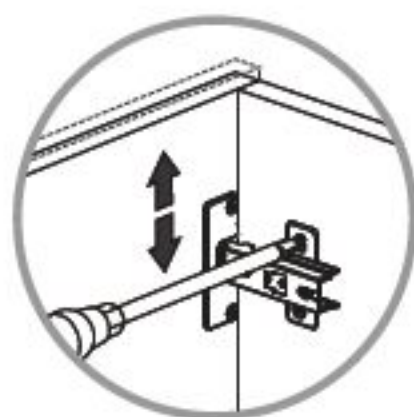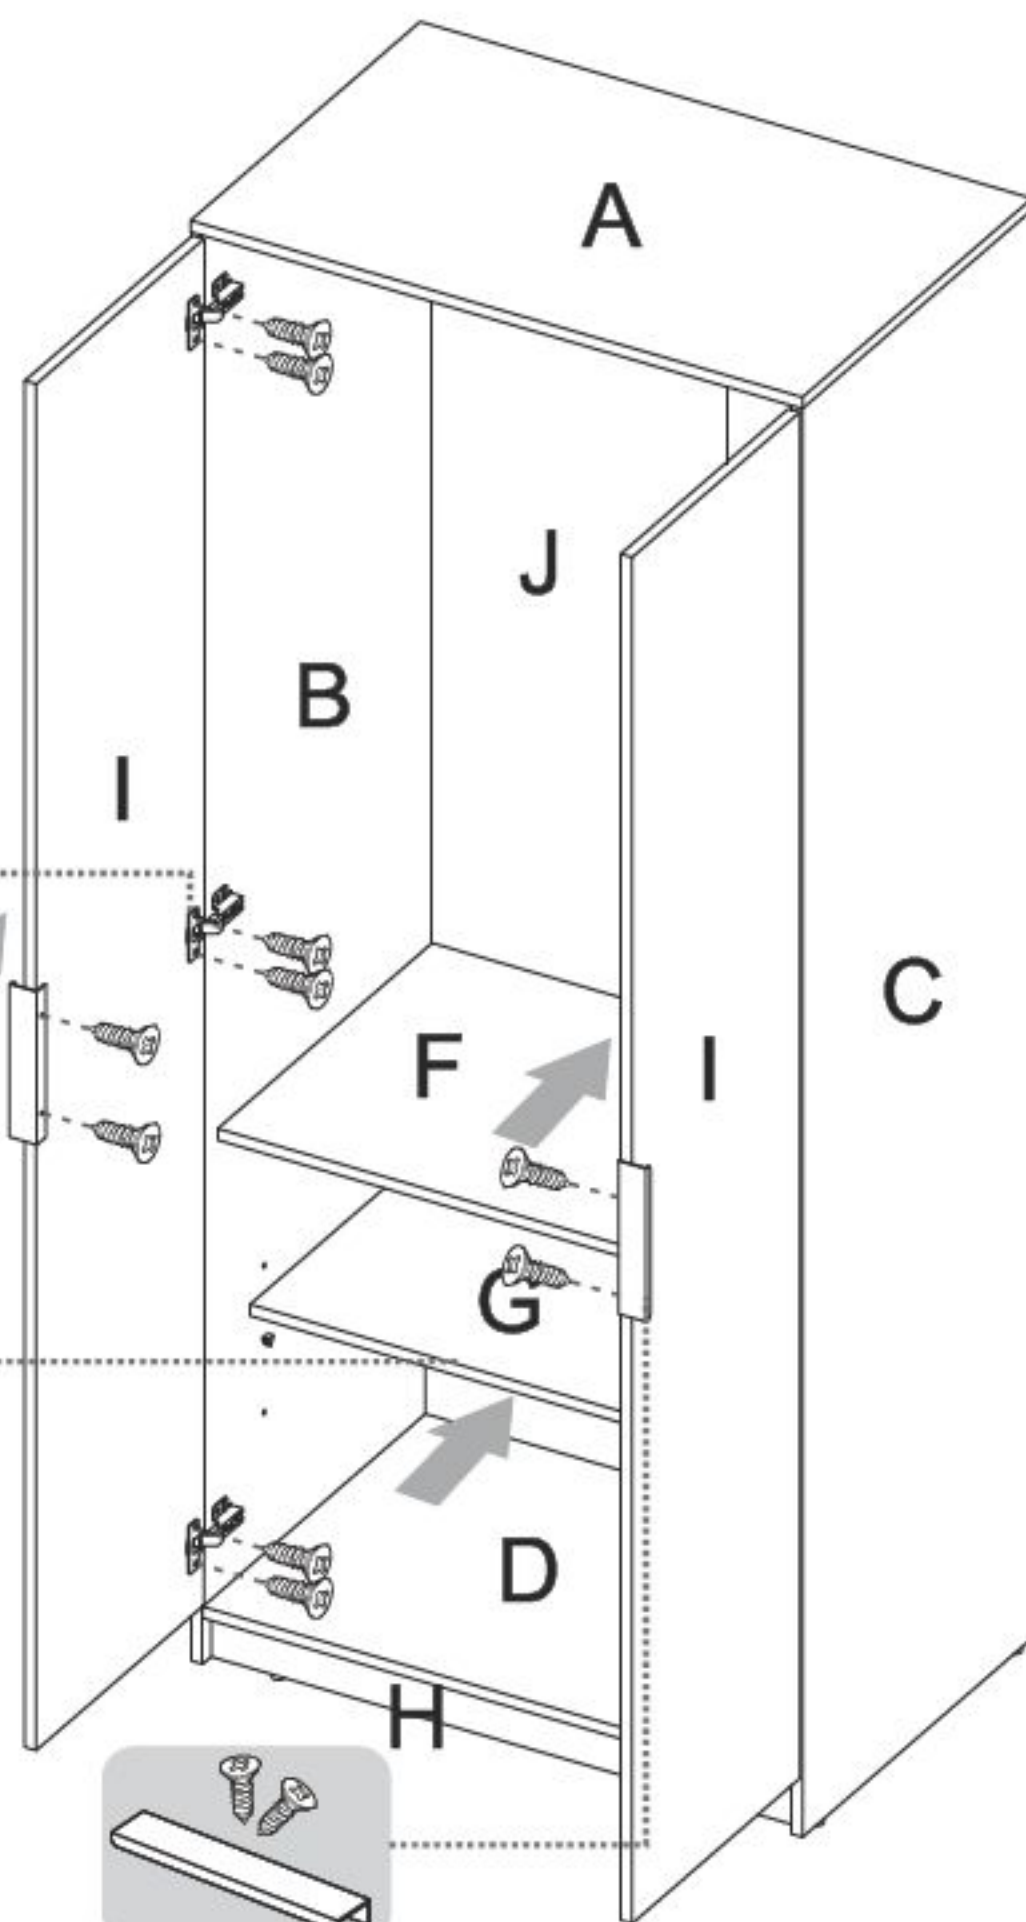

AJUSTE DE ALTURA
/ HEIGHT
ADJUSTMENT



AJUSTE DE
PROFUNDIDAD
/ DEPTH
ADJUSTMENT

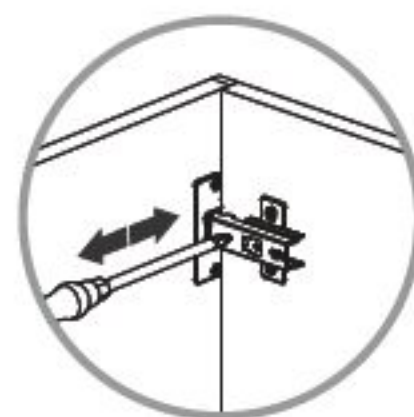

AJUSTE LATERAL
/ LATERAL
ADJUSTMENT




Al finalizar el ajuste, cubra
las cajas con las tapas
adhesivas/ After tightening all
the panels, cover the minifix
cams with the adhesive caps.



Al terminar de armar, desprenda
los adhesivos (en caso de que
queden residuos de pegamento,
limpie la superficie con alcohol) /
After finishing the assembly, take off
the adhesives. (In case of glue
residues, wipe them with alcohol)

RTA[®]
muebles

INSTRUCCIONES DE ENSAMBLE
ASSEMBLY INSTRUCTIONS

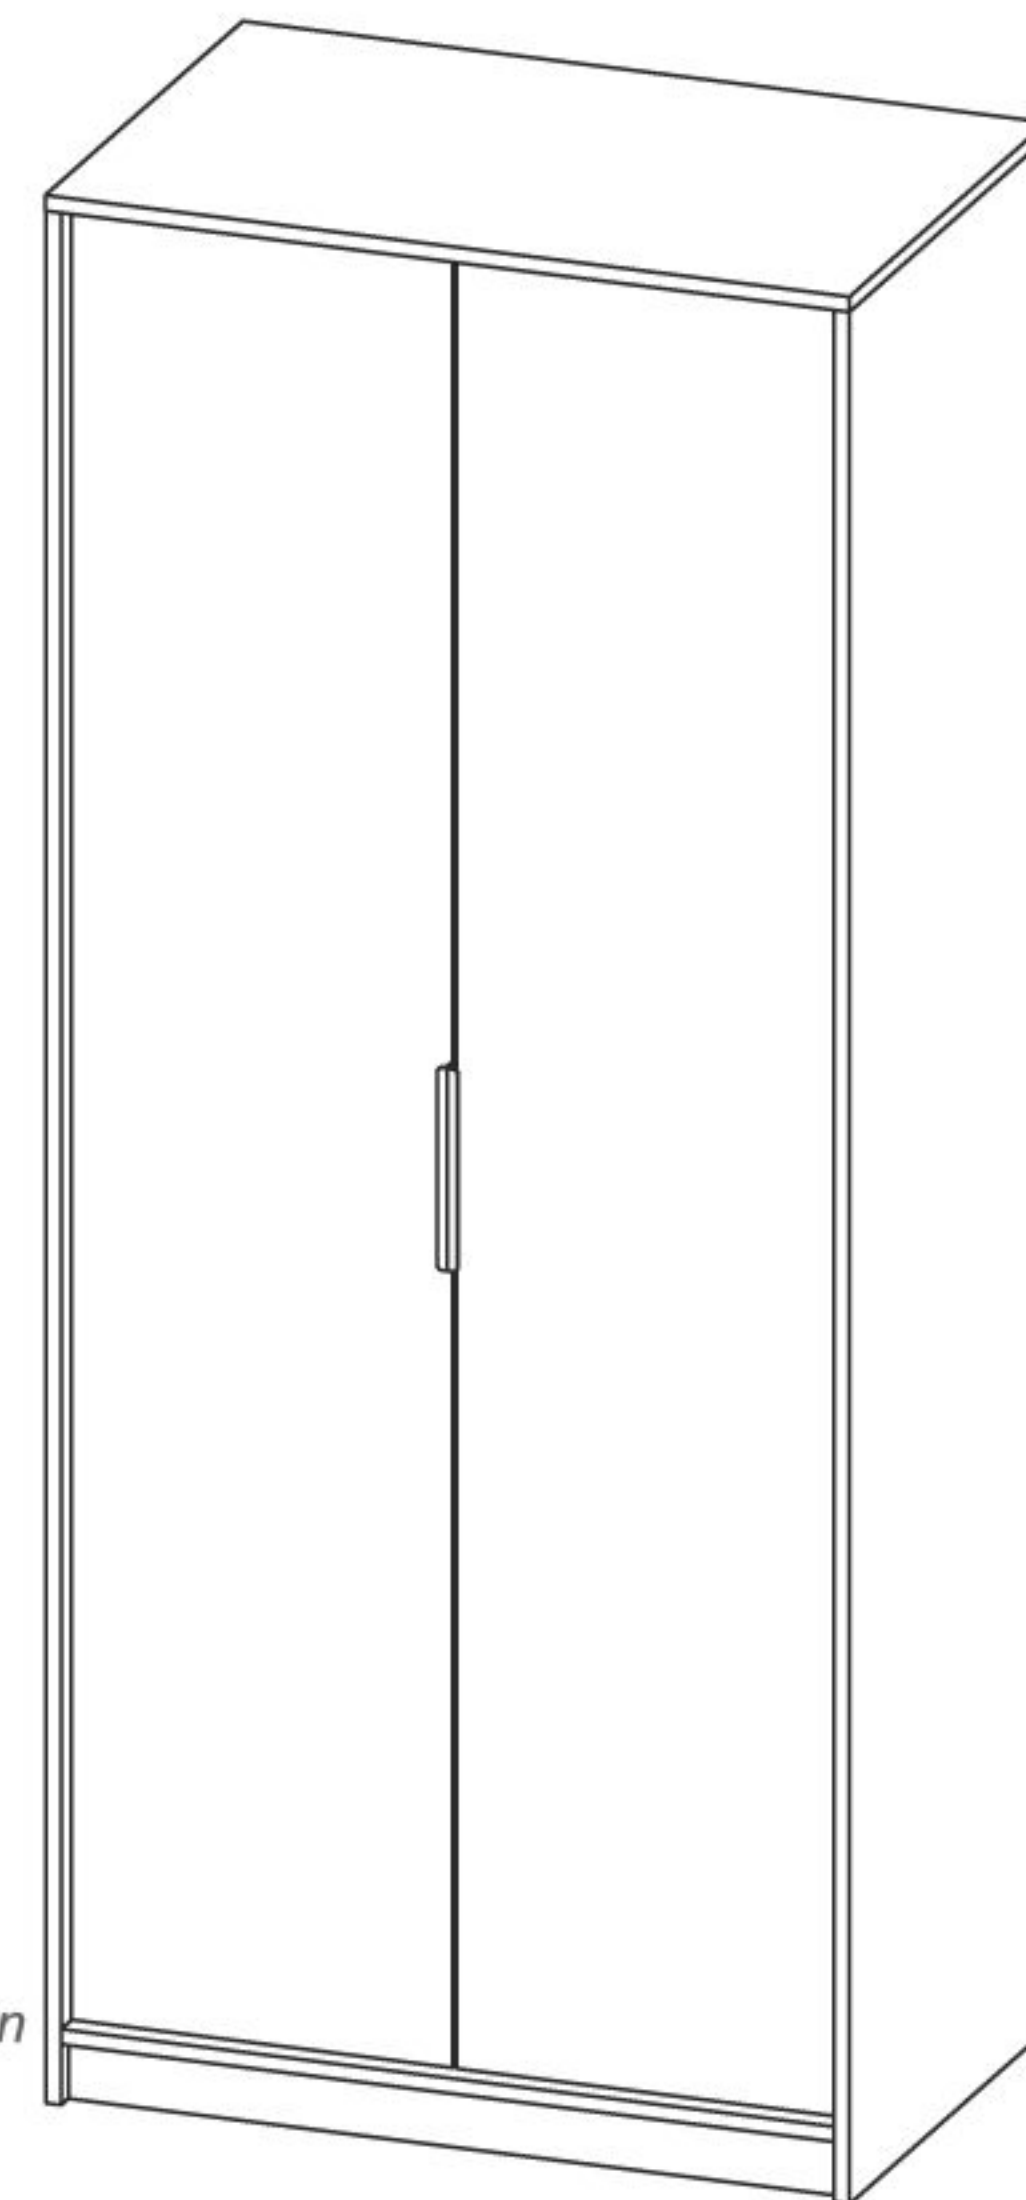

Alto/ Height: 189 cm / 74,41 in
Ancho/ Width: 80 cm / 31,49 in
Fondo/ Depth: 52,3 cm / 20,59 in

LOTE No: _____

REF./SKU. AWM3871

By: **RTA**[®]
muebles
TEL (572) 691 17 00
PBX (572) 695 91 81
CALI - COLOMBIA
www.rta.com.co

**ARMARIO
KAIA**
/Kaia Wardrobe