

25



INSTALACIÓN DE SOPORTE INVISIBLE A LA PARED/ INVISIBLE BRACKET INSTALLATION TO THE WALL



Perforaciones con taladro,
Broca de muro de 5/16" a
profundidad de 5.5 cm/
Drilling with drill, wall drill 5/16"
at a depth 5,5 cm



Perforaciones con taladro,
broca de muro de 1/4", a profundidad 6 cm/
Drilling with drill, wall drill 1/4"
at a depth 6 cm

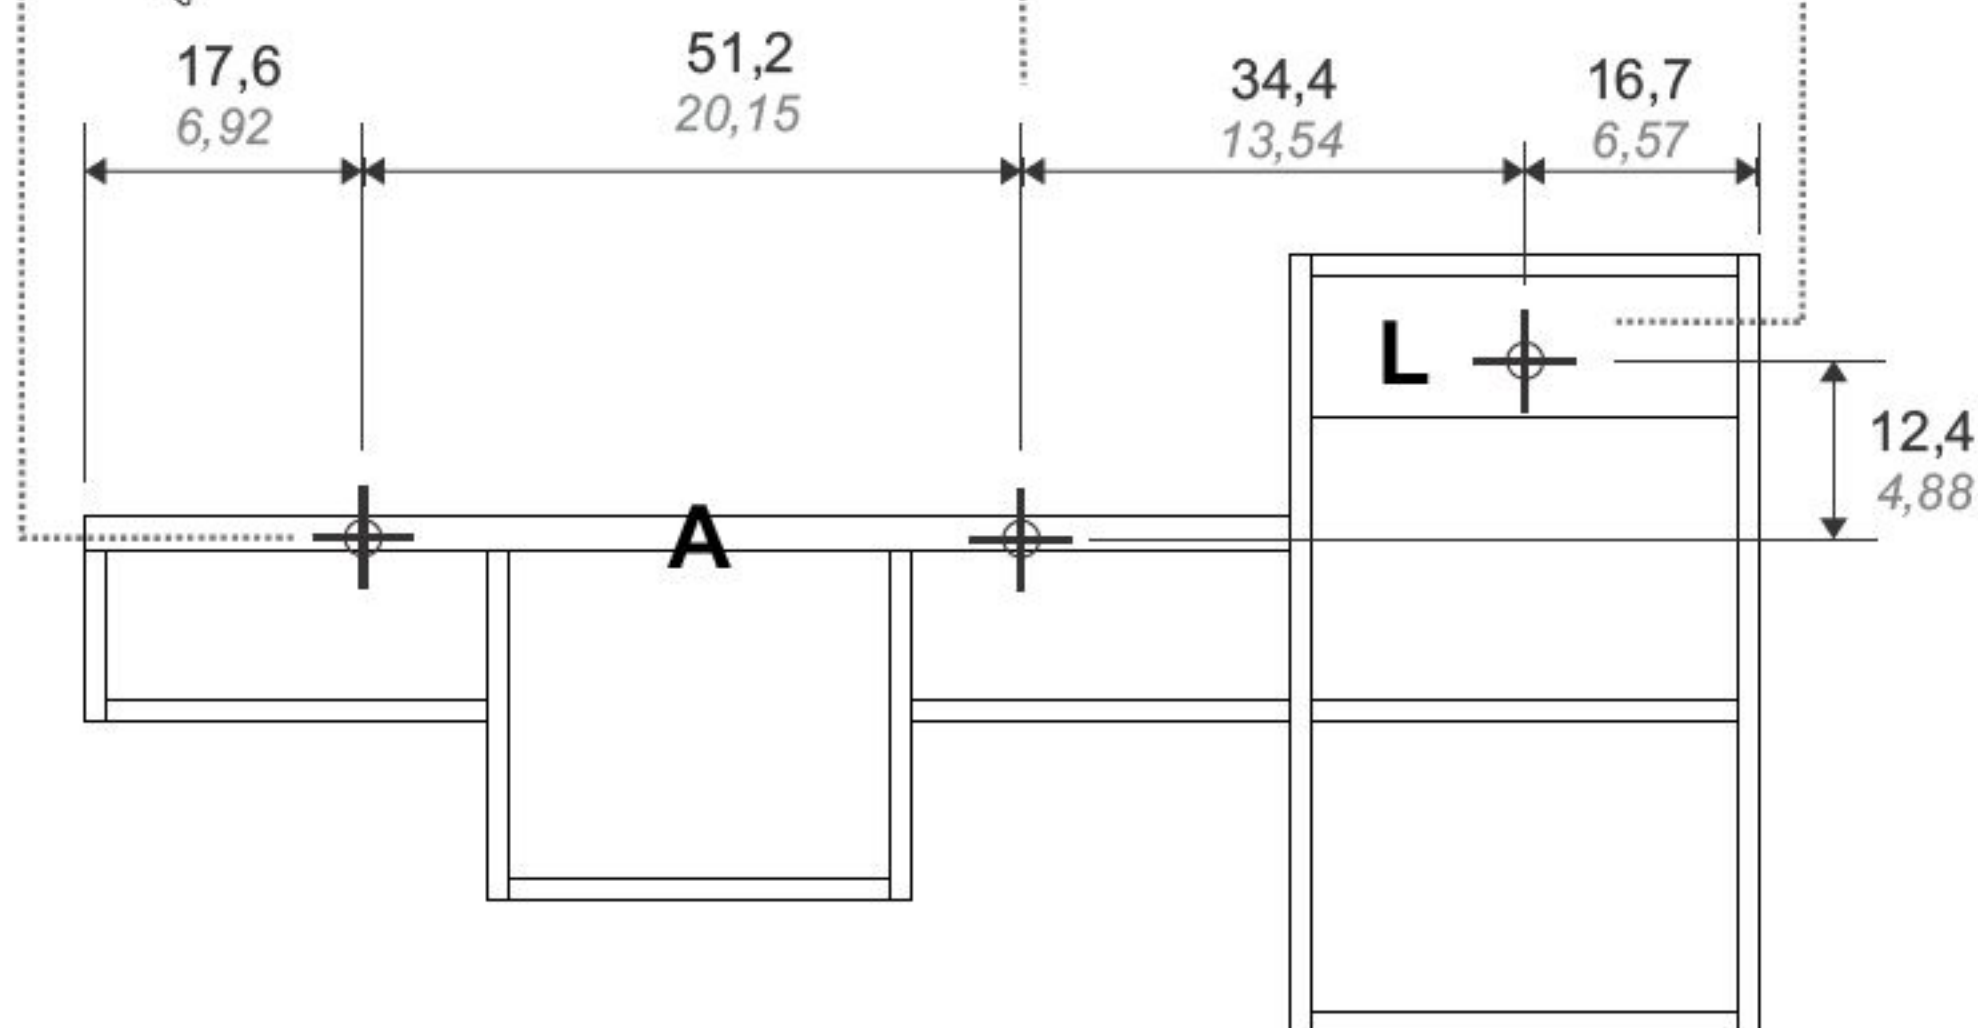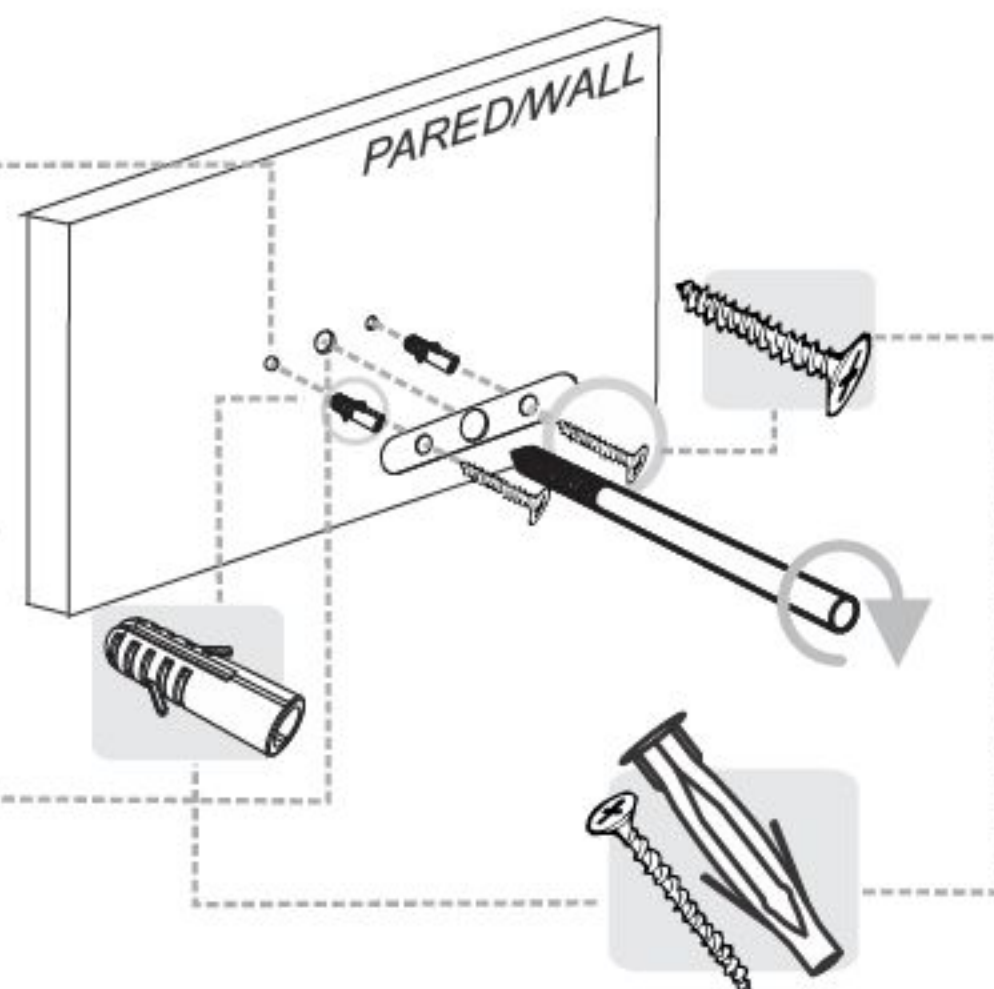

* Centímetros / Inches




Al finalizar el ajuste, cubra
las cajas con las tapas
adhesivas/ After tightening all
the panels, cover the minifix
cams with the adhesive caps.



Al terminar de armar, despegue
los adhesivos (en caso de que
queden residuos de pegamento,
limpie la superficie con alcohol) /
After finishing the assembly, take off
the adhesives. (In case of glue
residues, wipe them with alcohol)

RTA[®]
m u e b l e s

INSTRUCCIONES DE ENSAMBLE ASSEMBLY INSTRUCTIONS

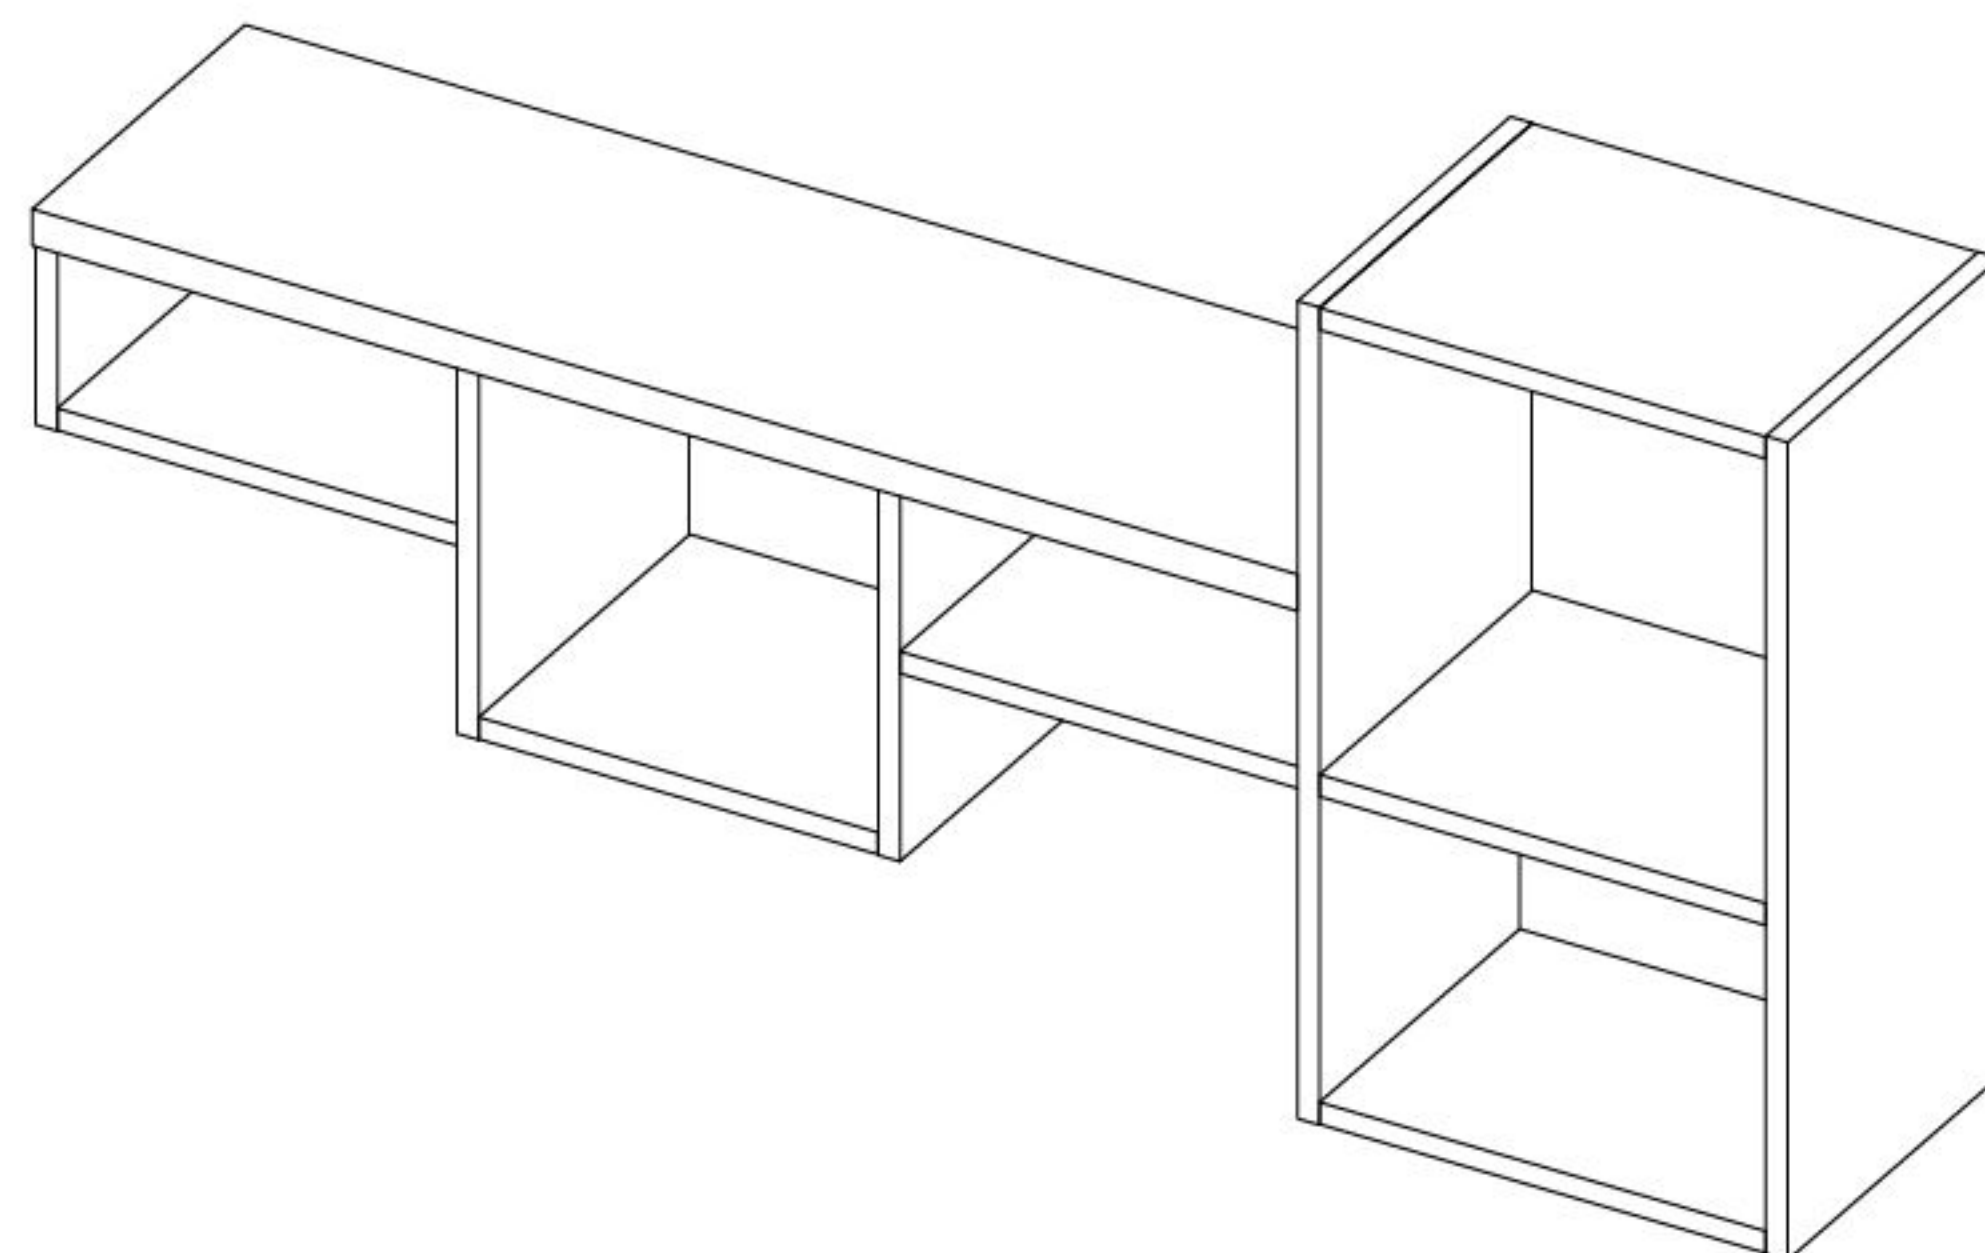

Alto/ Height: 56 cm / 22,04 in
Ancho/ Width: 120 cm / 47,24 in
Fondo/ Depth: 25 cm / 9,84 in

LOTE No: _____

REF./SKU. RLH 3808

By: RTA[®] * TEL (572) 691 17 00
m u e b l e s PBX (572) 695 91 81
CALI - COLOMBIA
www.rta.com.co

REPISA
WALL 1A
/Wall 1A Shelf