

25



# INSTALACIÓN DE SOPORTE INVISIBLE A LA PARED/ INVISIBLE BRACKET INSTALLATION TO THE WALL



Perforaciones con taladro,  
Broca de muro de 5/16" a  
profundidad de 5.5 cm/  
Drilling with drill, wall drill 5/16"  
at a depth 5,5 cm



Perforaciones con taladro,  
broca de muro de 1/4", a profundidad 6 cm/  
Drilling with drill, wall drill 1/4"  
at a depth 6 cm

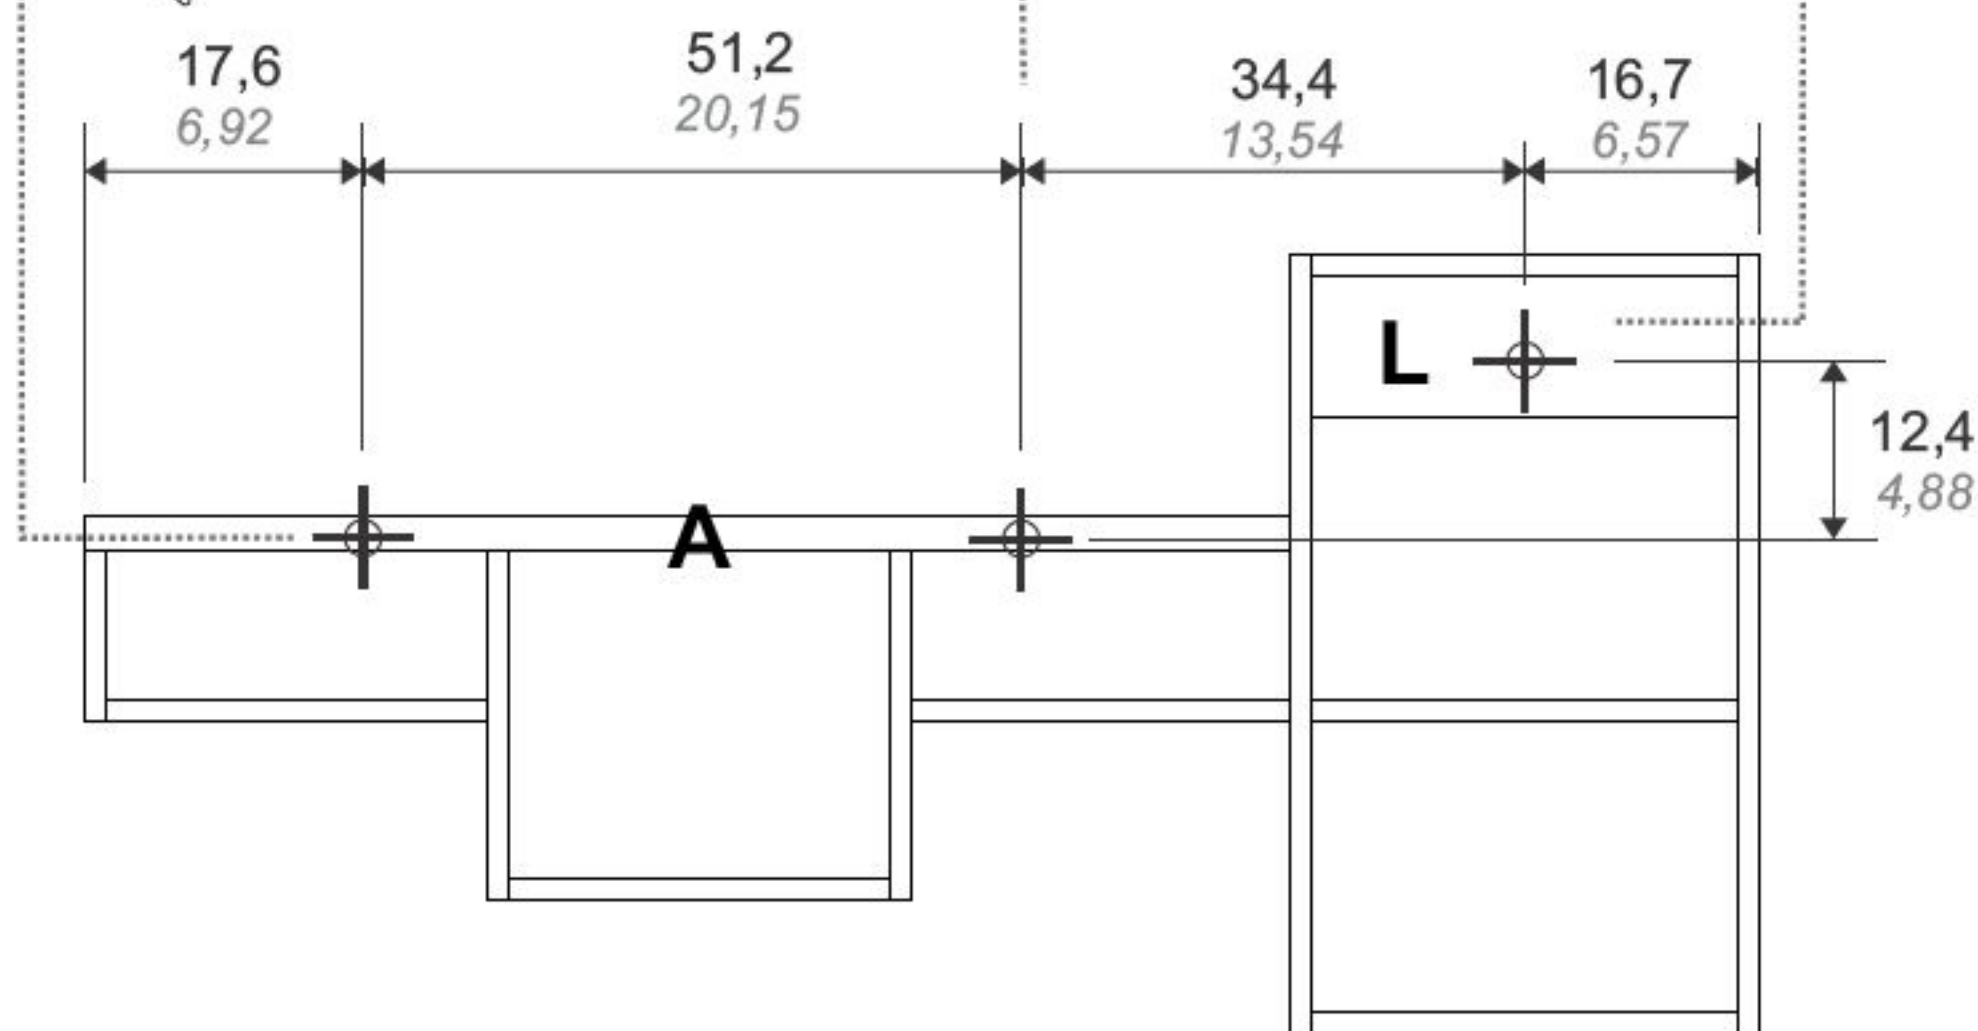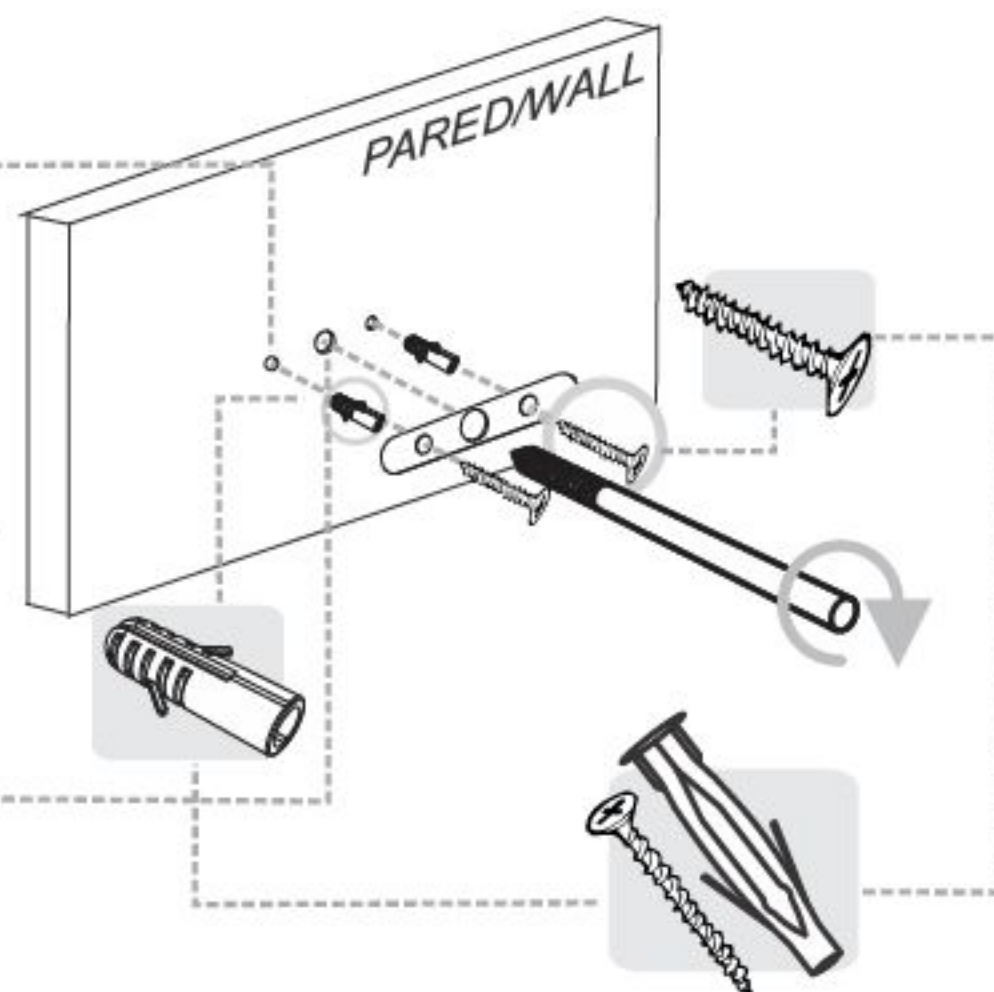

\* Centímetros / Inches




Al finalizar el ajuste, cubra  
las cajas con las tapas  
adhesivas/ After tightening all  
the panels, cover the minifix  
cams with the adhesive caps.



Al terminar de armar, despegue  
los adhesivos (en caso de que  
queden residuos de pegamento,  
limpie la superficie con alcohol) /  
After finishing the assembly, take off  
the adhesives. (In case of glue  
residues, wipe them with alcohol)

RTA<sup>®</sup>  
muebles

## INSTRUCCIONES DE ENSAMBLE ASSEMBLY INSTRUCTIONS

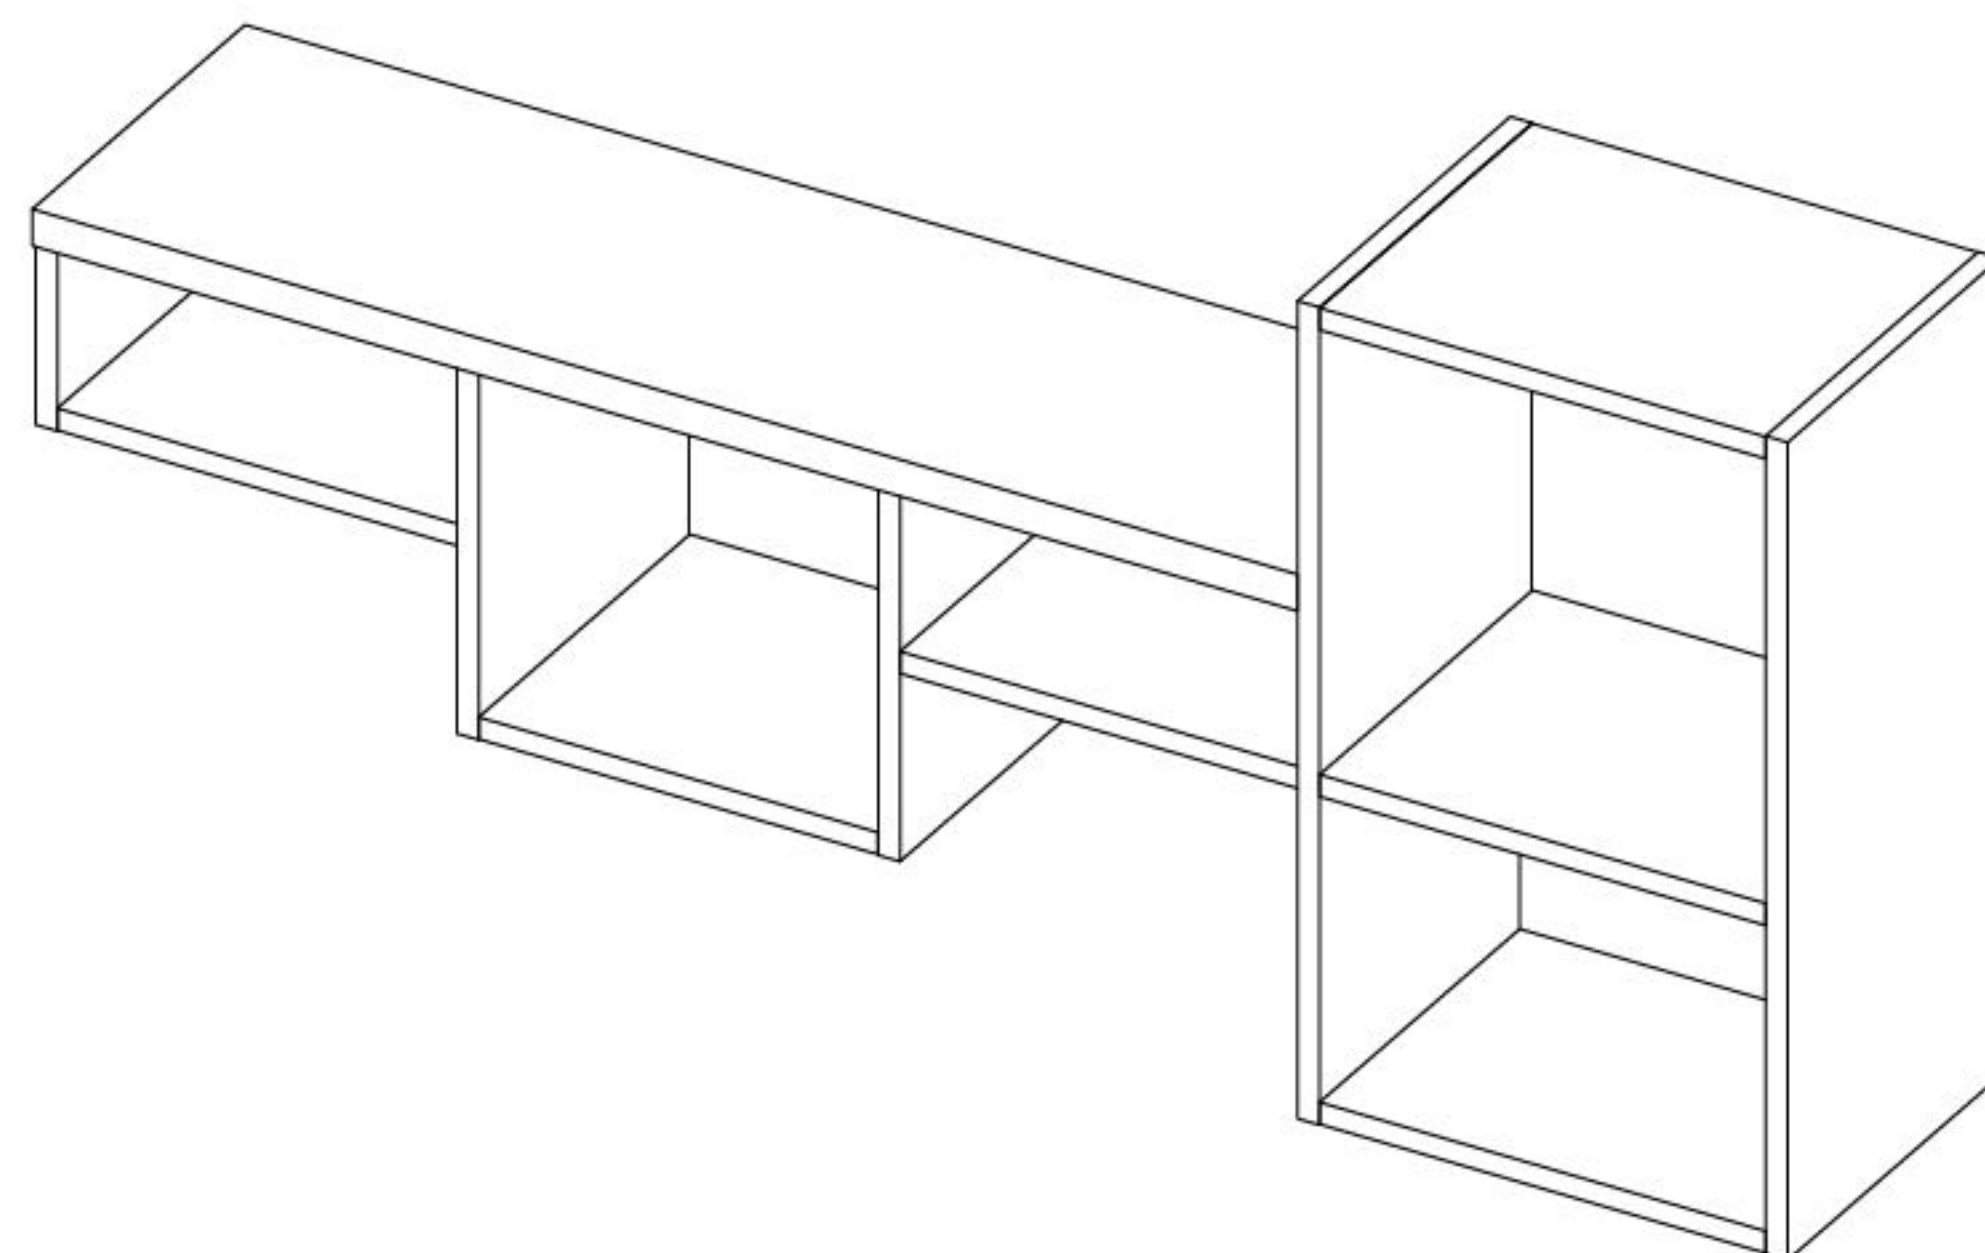

Alto/ Height: 56 cm / 22,04 in  
Ancho/ Width: 120 cm / 47,24 in  
Fondo/ Depth: 25 cm / 9,84 in

LOTE No: \_\_\_\_\_

REF./SKU. RLH 3808

By: RTA<sup>®</sup> \* TEL (572) 691 17 00  
muebles PBX (572) 695 91 81  
CALI - COLOMBIA  
[www.rta.com.co](http://www.rta.com.co)

REPISA  
WALL 1A  
/Wall 1A Shelf