



JCM
movelaria

Rack Humor Humor TV Stand Mesa de TV Humor



Indicamos que a montagem dos produtos seja realizada com parafusadeira eléctrica e por um montador profissional.
We recommend that a professional furniture assembler assemble the product by using a cordless screwdriver.
Se recomienda que un montador de muebles profesional realice el montaje del producto con un destornillador eléctrico.

AVISO: Não nos comprometemos pelo mau uso, montagem e fixação do produto à parede. Portanto, não somos responsáveis por danos e quebras do produto, electrónicos e pertences neles contidos. É importante o uso de brocas e ferramentas compatíveis na montagem.
NOTICE: The company is not responsible for the misuse, assembly, and wall fixation, as well as the damages and falls that the products, electronics, and belongings therein might suffer. It is important to use suitable drills and tools to assemble the product.
ATENCIÓN: La empresa no se responsabiliza del mal uso, montaje y fijación del producto a la pared, así como de daños y roturas del producto, electrónicos u objetos. Es importante el uso de brocas y herramientas compatibles con el montaje.

Dica: para evitar possíveis avarias, use a embalagem do produto como apoio durante a montagem.




Tip: to avoid damages, use the product packaging as a base during the assembly.

Pista: para evitar daños, use el envase del producto como apoyo durante el montaje.


RELAÇÃO DE FERRAGENS | HARDWARE LIST | LISTADO DE HERRAJES

KIT ROLDANA	(A)	ROLLER KIT	(A)	KIT RODILLO	(A)		01
PARAFUSO CHIP CHA BC 3,5x14	(B)	3.5x14 SCREW	(B)	TORNILLO 3,5x14	(B)		32
PARAFUSO CHIP CHA BC 4x25	(C)	4x25 SCREW	(C)	TORNILLO 4x25	(C)		16
PARAFUSO ESTR CHA PHI ZP 5x40	(D)	5x40 SCREW	(D)	TORNILLO 5x40	(D)		14
PARAFUSO MINIFIX	(E)	MINIFIX BOLT	(E)	PERNO MINIFIX	(E)		14
PINO PRATELEIRA	(F)	SHELF SUPPORT	(F)	SOPORTE DE ESTANTE	(F)		04
PREGO 8x8 C/C	(G)	8x8 NAIL	(G)	CLAVO 8x8	(G)		30
TAMBOR MINIFIX 12x10mm	(H)	12x10mm MINIFIX CAM	(H)	CAJA MINIFIX 12x10mm	(H)		14
RODÍZIO	(I)	CASTER	(I)	RUEDA	(I)		06

RELAÇÃO DE PEÇAS | PARTS LIST | LISTADO DE PARTES

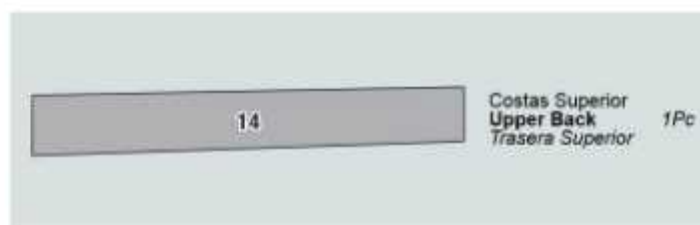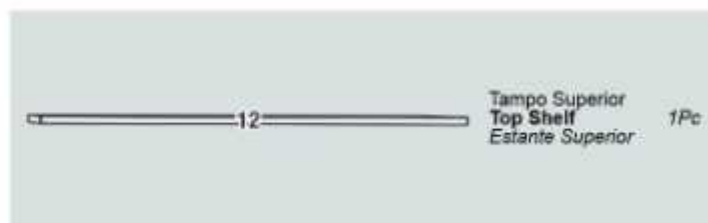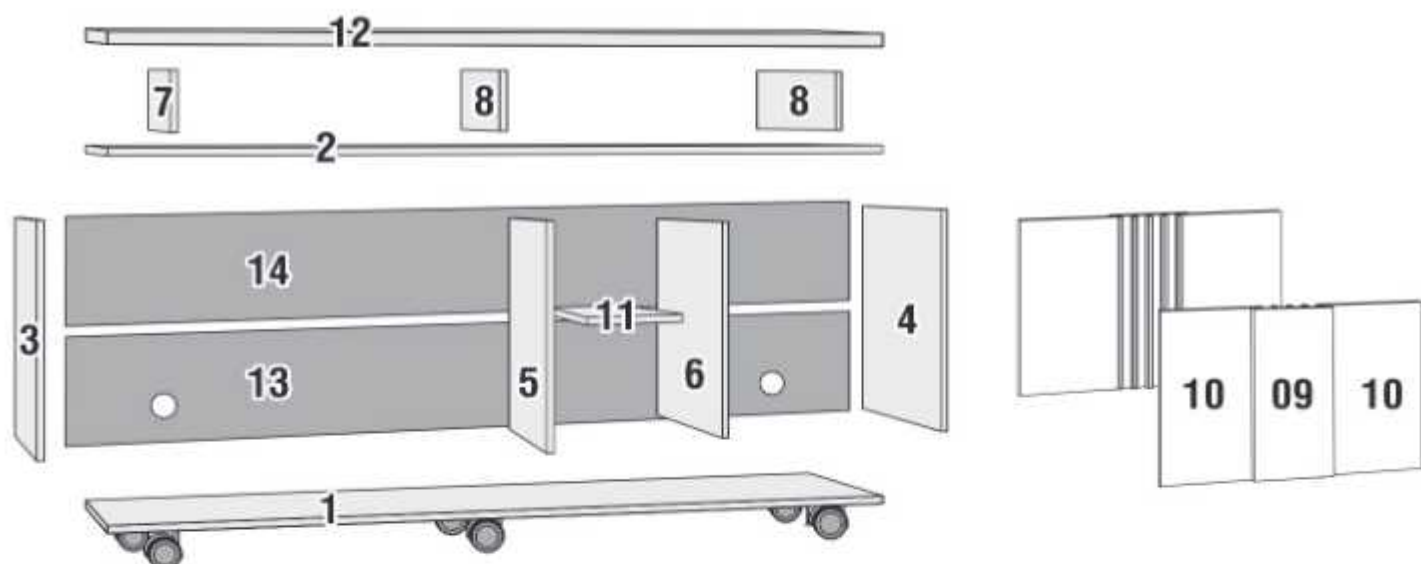

Passo 01: INICIE A MONTAGEM PELA PEÇA 12. ENCAIXE E APERTE AS PEÇAS 7 E 8 NA PEÇA 12 COM MINIFIX (E+H).
 Step 01: START THE ASSEMBLY BY PART 12. FASTEN PARTS 7 AND 8 TO PART 12 WITH MINIFIX (E+H).
 Paso 01: EMPIECE EL MONTAJE POR LA PARTE 12. FIJE LAS PARTES 7 Y 8 A LA PARTE 12 CON MINIFIX (E+H).




E=6

H=6

VISTA FRONTAL
 FRONT VIEW
 VISTA FRONTAL


Passo 02: PARAFUSE A PEÇA 2 NAS PEÇAS 7 E 8 COM PARAFUSO 5x40 (D).
 Step 02: FASTEN PART 2 TO PARTS 7 AND 8 WITH 5x40 SCREW (D).
 Paso 02: FIJE LA PARTE 2 A LAS PARTES 7 Y 8 CON TORNILLO 5x40 (D).

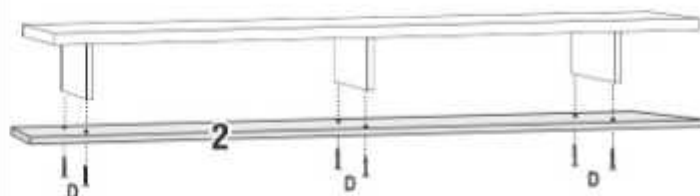

D=6

VISTA FRONTAL
 FRONT VIEW
 VISTA FRONTAL

Passo 03: ENCAIXE E APERTE AS PEÇAS 3, 5, 6 E 4 NA PEÇA 2 COM MINIFIX (E+H).
 Step 03: FASTEN PARTS 3, 5, 6, AND 4 TO PART 2 WITH MINIFIX (E+H).
 Paso 03: FIJE LAS PARTES 3, 5, 6 Y 4 A LA PARTE 2 CON MINIFIX (E+H).

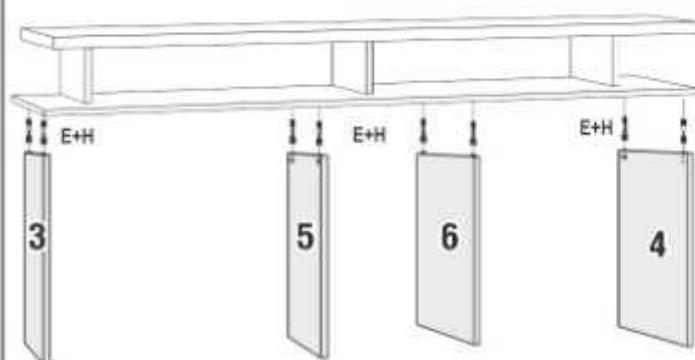


E=8

H=8

VISTA FRONTAL
 FRONT VIEW
 VISTA FRONTAL


Passo 04: PARAFUSE A PEÇA 1 NAS PEÇAS 3, 5, 6 E 4 COM PARAFUSO 5x40 (D).
 Step 04: FASTEN PART 1 TO PARTS 3, 5, 6, AND 4 WITH 5x40 SCREW (D).
 Paso 04: FIJE LA PARTE 1 A LAS PARTES 3, 5, 6 Y 4 CON TORNILLO 5x40 (D).

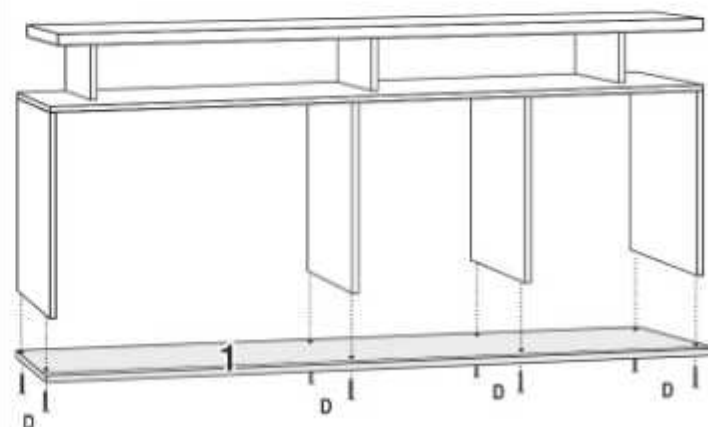

D=8

VISTA FRONTAL
 FRONT VIEW
 VISTA FRONTAL

Passo 05: PARAFUSE OS RODÍZIOS (I) COM PARAFUSO 3,5x14 (B).
 Step 05: FASTEN THE CASTERS (I) WITH 3.5x14 SCREW (B).
 Paso 05: FIJE LAS RUEDAS (I) CON TORNILLO 3,5x14 (B).

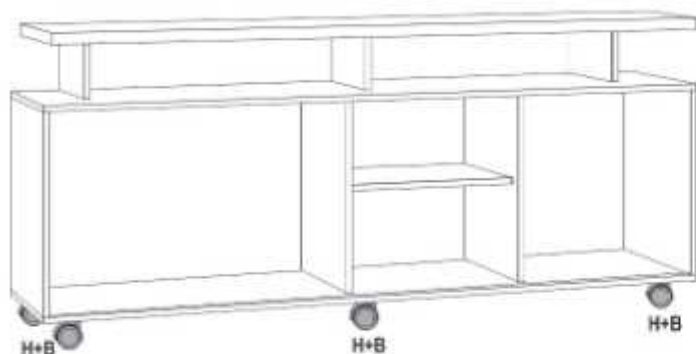


B = 24

I = 6

VISTA FRONTAL
 FRONT VIEW
 VISTA FRONTAL

Passo 06: PREGUE AS COSTAS COM PREGO 8x8 (G).
 Step 06: FASTEN THE BACK WITH 8x8 NAILS (G).
 Paso 06: FIJE LA TRASERA CON CLAVOS 8x8 (G).

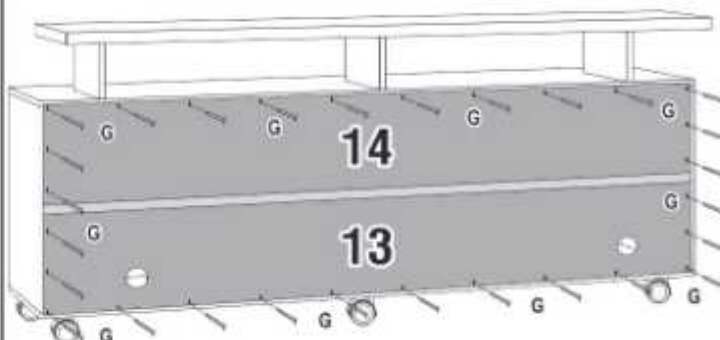


G = 30

VISTA TRASEIRA
 BACK VIEW
 VISTA TRASERA


Passo 07: MONTE A PORTA PARAFUSANDO AS PEÇAS 9, 10 E 15 CONFORME DESENHO ABAIXO, USANDO AS RESPECTIVAS FERRAGENS.

Step 07: ASSEMBLE THE DOOR BY FASTENING PARTS 9, 10, AND 15 WITH THEIR HARDWARE, AS THE PICTURE SHOWS.

Paso 07: MONTE LA PUERTA FIJANDO LAS PARTES 9, 10 Y 15 CON SUS HERRAJES, SEGÚN EL DISEÑO.

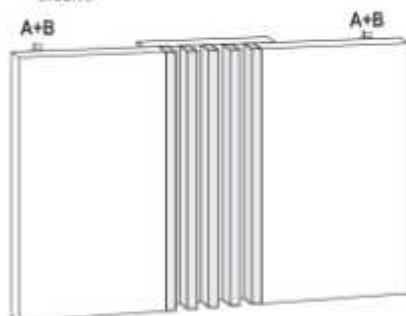

VISTA FRONTAL
 FRONT VIEW
 VISTA FRONTAL

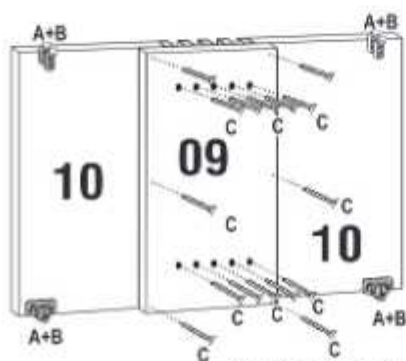


VISTA TRASEIRA
 BACK VIEW
 VISTA TRASERA

A = 1

B = 8

C = 16

Passo 08: COLOCAR A PEÇA 11 COM PINO PRATELEIRA (F).
 Step 08: FASTEN PART 11 WITH SHELF SUPPORT (F).
 Paso 08: FIJE LA PARTE 11 CON SOPORTE DE ESTANTE (F).

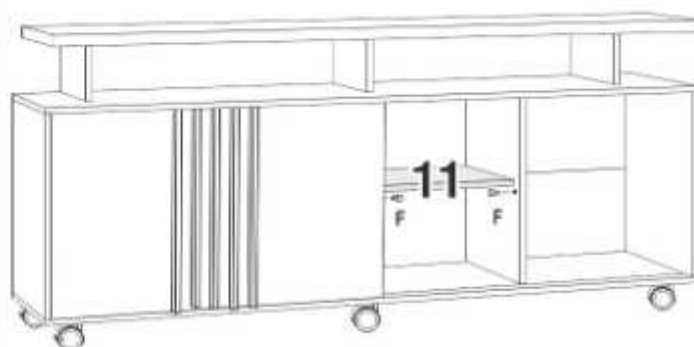

F = 4

VISTA FRONTAL
 FRONT VIEW
 VISTA FRONTAL