

R - 1461



Instruções de Montagem Assembly Instructions Instrucciones de Montaje

Acesse Vídeos de Montagens
Access Mounting Videos
Acceder a los Vídeos de Montaje
www.tecnomobili.ind.br

tecnomobili

Estrada RSC 453, Km s/n° | Garibaldi | RS
CEP: 95720-000 | Fone / Fax: 54.3464.2050
sac@moveisvideira.com.br

Notas Especiais:

01 -Examine completamente todas as peças do móvel antes de começar o trabalho.

02 -Recomenda-se montar o móvel conforme este Manual de Montagem.

03 -É de responsabilidade do montador seguir as instruções do Manual de Montagem, que são fundamentais para garantir a estrutura do móvel.

04 -Para limpeza, utilizar somente pano úmido e sabão neutro.

Special notes:

01 -Check all parts of the unit thoroughly before starting work.

02 -It is recommended to assemble the furniture according to this Installation Manual.

03 -It is the responsibility of the assembler to follow the instructions in the Assembly Manual, which are essential to ensure the structure of the furniture.

04 -For cleaning use only damp cloth and neutral soap.

Notas especiales:

01 -Examine completamente todas las piezas del mueble antes de iniciar el trabajo.

02 -Se recomienda montar el mueble conforme el Manual de Ensamblaje.

03 -Es de responsabilidad del montador seguir las instrucciones del Manual de Ensamblaje, que son fundamentales para garantizar la estructura del mueble.

04 -Para limpieza solamente usar trapo húmedo y jabón neutro.


Guarante certificate:

The guarantee of products manufactured by Móveis Videira LTDA covers any defects / manufacturing defects, within the period established by the Consumer Protection Code, in its Article 26, II, which provides for a legal guarantee of ninety (90) days.



Lista de Peças / List of pieces / Lista de piezas



Cód	DESCRIÇÃO	DESCRIPTION	DESCRIPCION	QTD	RAW MATERIAL	DIMENSION
01	Base	Base	Base	1	MDP 15mm	1360x330x15mm
02	Porta	Door	Puerta	2	MDP 15mm	450x330x15mm
03	Divisão Direita	Right Division	División Derecha	1	MDP 15mm	336x314 x15mm
04	Lateral	Side	Lateral	2	MDP 15mm	336x330x15mm
05	Pé Esquerdo	Left Foot	Pie Izquierdo	2	Madeira Eucalipto	230x45x45 mm
06	Pé Direito	Right Foot	Pie Derecho	2	Madeira Eucalipto	230x45x45 mm
07	Divisão Esquerda	Left Division	División Izquierda	1	MDP 15mm	336x314 x15mm
08	Tampo Adega	CellarTop	Tapa Bodega	1	MDP 15mm	432x300 x15mm
09	Divisão Adega	Cellar Division	División Bodega	3	MDP 15mm	97x300x15mm
10	Tampo	Top	Tapa	1	MDP 25mm	1360x330 x15mm
11	Costa	Back	Costa	4	MDP 3mm	453x178x3mm
12	Perfil I	Profile I	Perfil I	2	Prástico	430mm

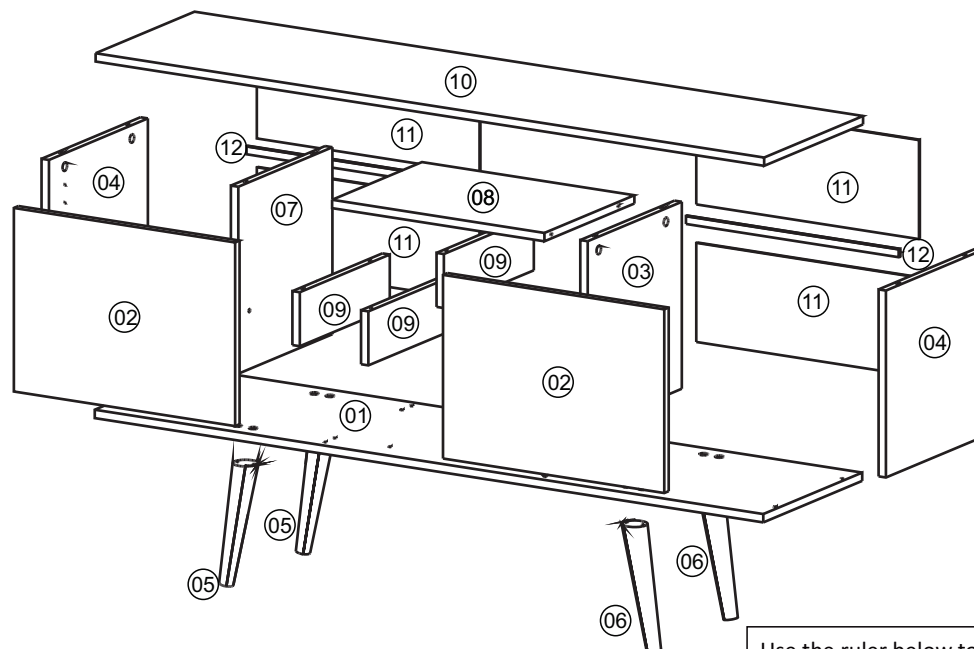

REF DESCRIÇÃO QTD


A		Cavilha 5 x 30mm	20
B		3,5 x 16mm CC	16
C		Adesivo Tapa Furo	8
D		22 x 3mm Pregos 10x10	28
E		34 x 7mm Parafuso Minifix	12
F		15 x 12mm Tambor Minifix	12
G		Perfil I 435 mm	02
H		80 x 48 x 31 mm Dobradiça Alta Calço N° 12	04
I		Parafuso 3,5 x 40 mm	04
J		Parafuso 5,0 x 35 CF	08

Ferramentas | Tools | Herramientas

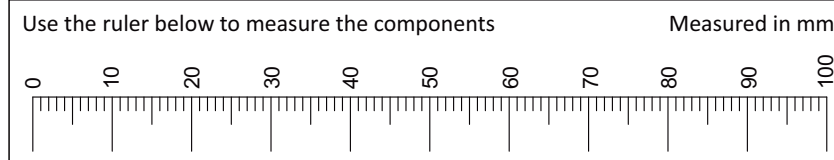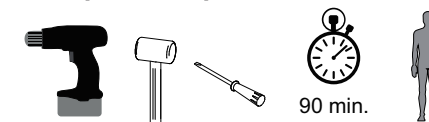


Revisão: 00
Data: 08/05/2019


01

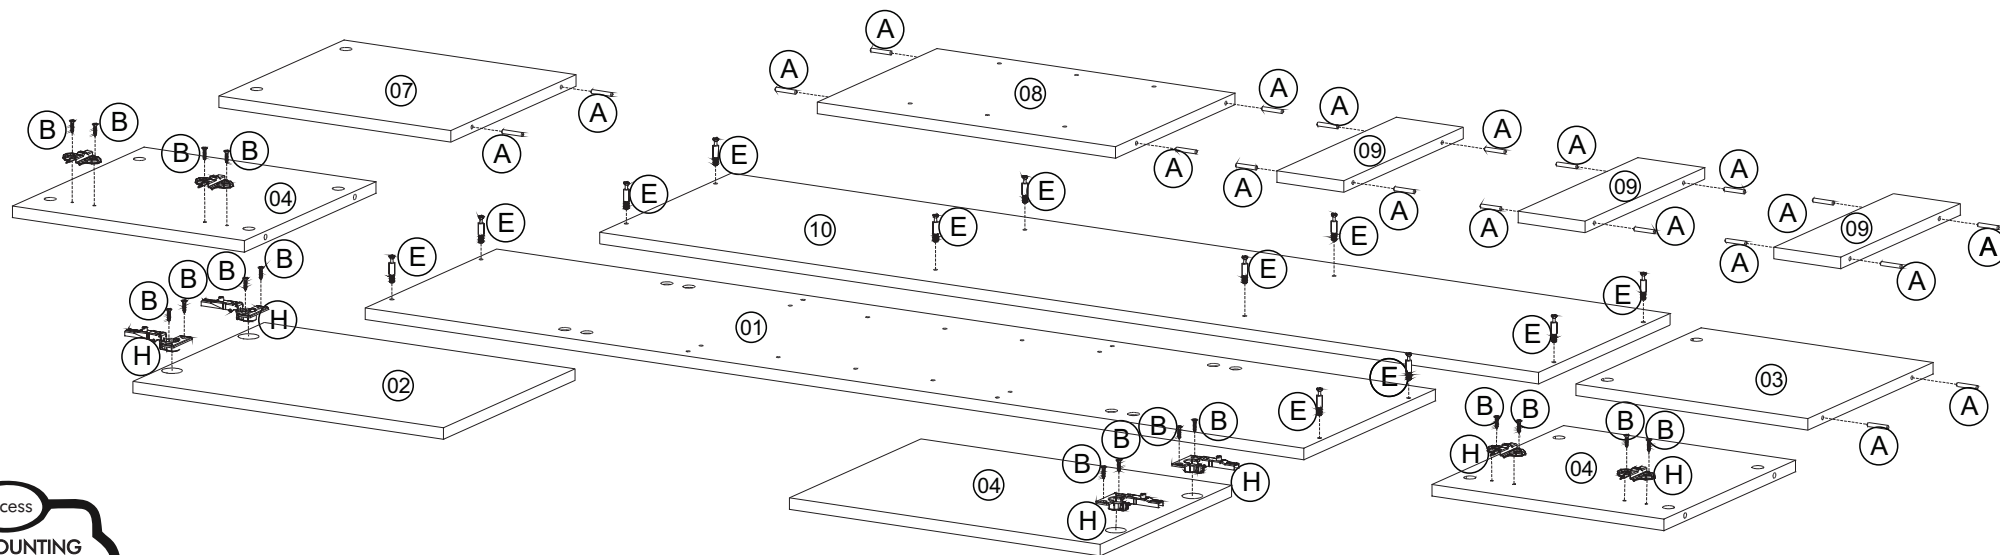


02

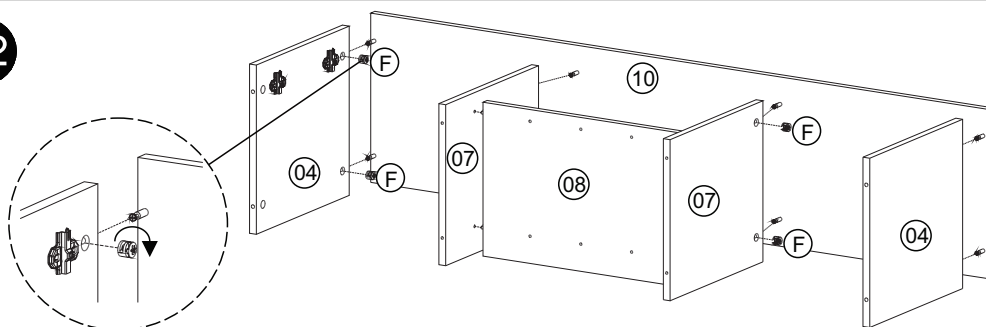


03

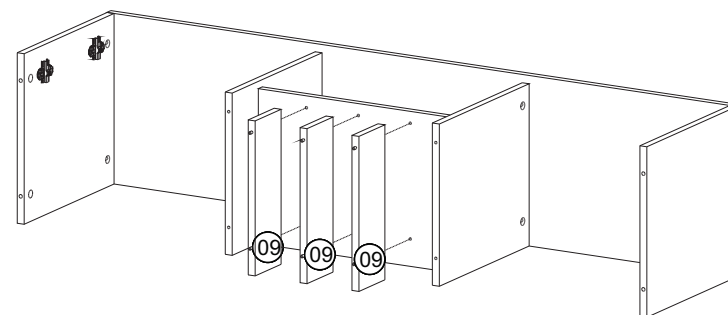


04

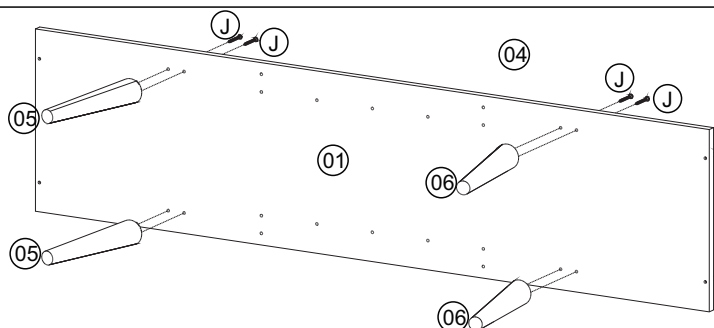

05

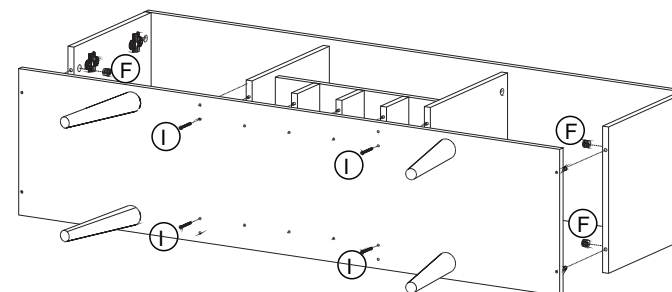

06

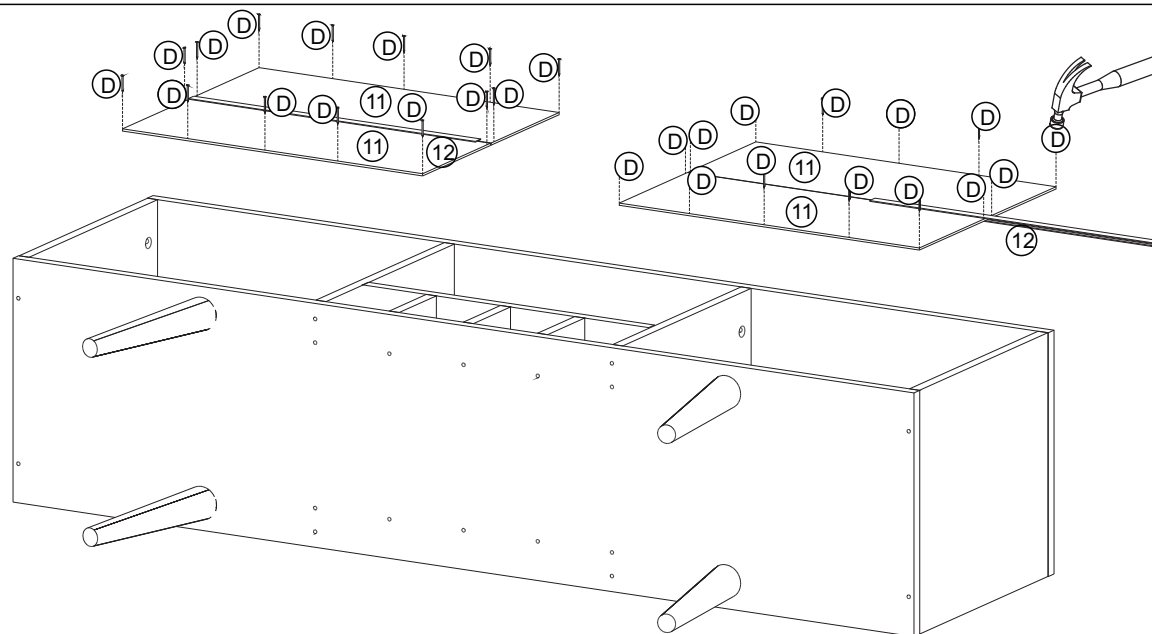

07

Colocar a dobradiça sobre o calço. / Place the hinge on the wedge. / Colocar la bisagra sobre el calzo.

