

CZ-1011

Instruções de Montagem Assembly Instructions Instrucciones de Armado

Acesse Vídeos de Montagens
Access Mounting Videos
Acceder a los Vídeos de Montaje
www.tecnomobili.ind.br

tecnomobili

Estrada RSC 453, Km s/n° | Garibaldi | RS
CEP: 95720-000 | Fone / Fax: 54.3464.2050
sac@moveisvideira.com.br

Notas Especiais:

01 -Examine completamente todas as peças do móvel antes de começar o trabalho.

02 -Recomenda-se montar o móvel conforme este Manual de Montagem.

03 -É de responsabilidade do montador seguir as instruções do Manual de Montagem, que são fundamentais para garantir a estrutura do móvel.

04 -Para limpeza, utilizar somente pano úmido e sabão neutro.

Special notes:

01 -Check all parts of the unit thoroughly before starting work.

02 -It is recommended to assemble the furniture according to this Installation Manual.

to follow the instructions in the Assembly Manual, which are essential to ensure the structure of the furniture.

04 -For cleaning use only damp cloth and neutral soap.

Notas especiales:

01 -Examine completamente todas las piezas del mueble antes de iniciar el trabajo.

02 -Se recomienda montar el mueble conforme el Manual de Ensamblaje.

03 -Es de responsabilidad del montador seguir las instrucciones del Manual de Ensamblaje, que son fundamentales para garantizar la estructura del mueble.

04 -Para limpieza solamente usar trapo húmedo y jabón neutro.


Guarante certificate:

The guarantee of products manufactured by Móveis Videira LTDA covers any defects / manufacturing defects, within the period established by the Consumer Protection Code, in its Article 26, II, which provides for a legal guarantee of ninety (90) days.



Lista de Peças / List of pieces / Lista de piezas


CóD	DESCRIÇÃO	DESCRIPTION	DESCRIPCION	QTD	RAW MATERIAL	DIMENSION	CÓD
01	Lateral	Rigth Side	Lateral	2	MDP 15 mm	1910x298x15 mm	351011
02	Base	Base	Base	1	MDP 15 mm	370x298x15 mm	201001
03	Tampo	Top	Topa	2	MDP 15 mm	370x298x15 mm	701001
04	Costa	Back	Revés	1	MDP 03 mm	1900x390x03 mm	411011
05	Prateleira	Shelf	Estante	2	MDP 15 mm	370x255x15 mm	201011
06	Porta	Door	Puerta	2	MDP 15 mm	948x396x15 mm	811011

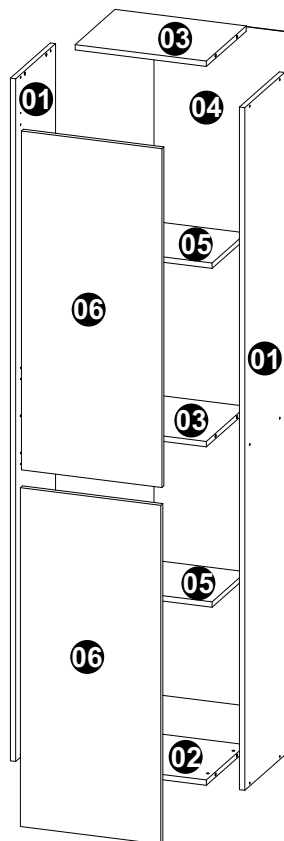

REF	DESCRIÇÃO	QTD	cód
A	3,5x14mm CC	22	3639
B	3,5x25mm CC	02	0286
C	3,5x40mm CC	12	8115
D	Cavilha 8 x 30mm	12	2806
E	5,0x40mm CC	04	4000
F	5x45mm CF	02	2605


ILUSTRAÇÃO - ILUSTRACION - ILLUSTRATION

REF	DESCRIÇÃO	QTD	cód
G	Dobradiça reta 80x48x22mm caneco Ø26mm e calço Nº 1	04	3614
H	128mm Puxador	02	9629
I	43x43x25mm Cantoneira com Capa	02	5630
J	3,5x25mm CP	04	9623
K	Adesivo Tapa Furo	12	
L	40x8mm Bucha 8mm	02	5623
M	140 x 33 x 33mm Pé Quadrado Regulável	04	9625
N	22x3mm Prego 10x10	40	3051
O	14x8x5mm Suporte Prateleira 5x8 c/ estria	08	3748

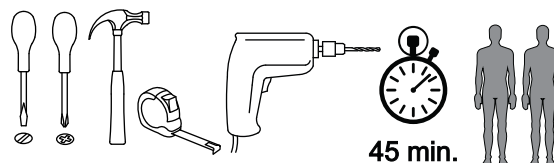


Revisão: 00
Data: 12/12/2022


1

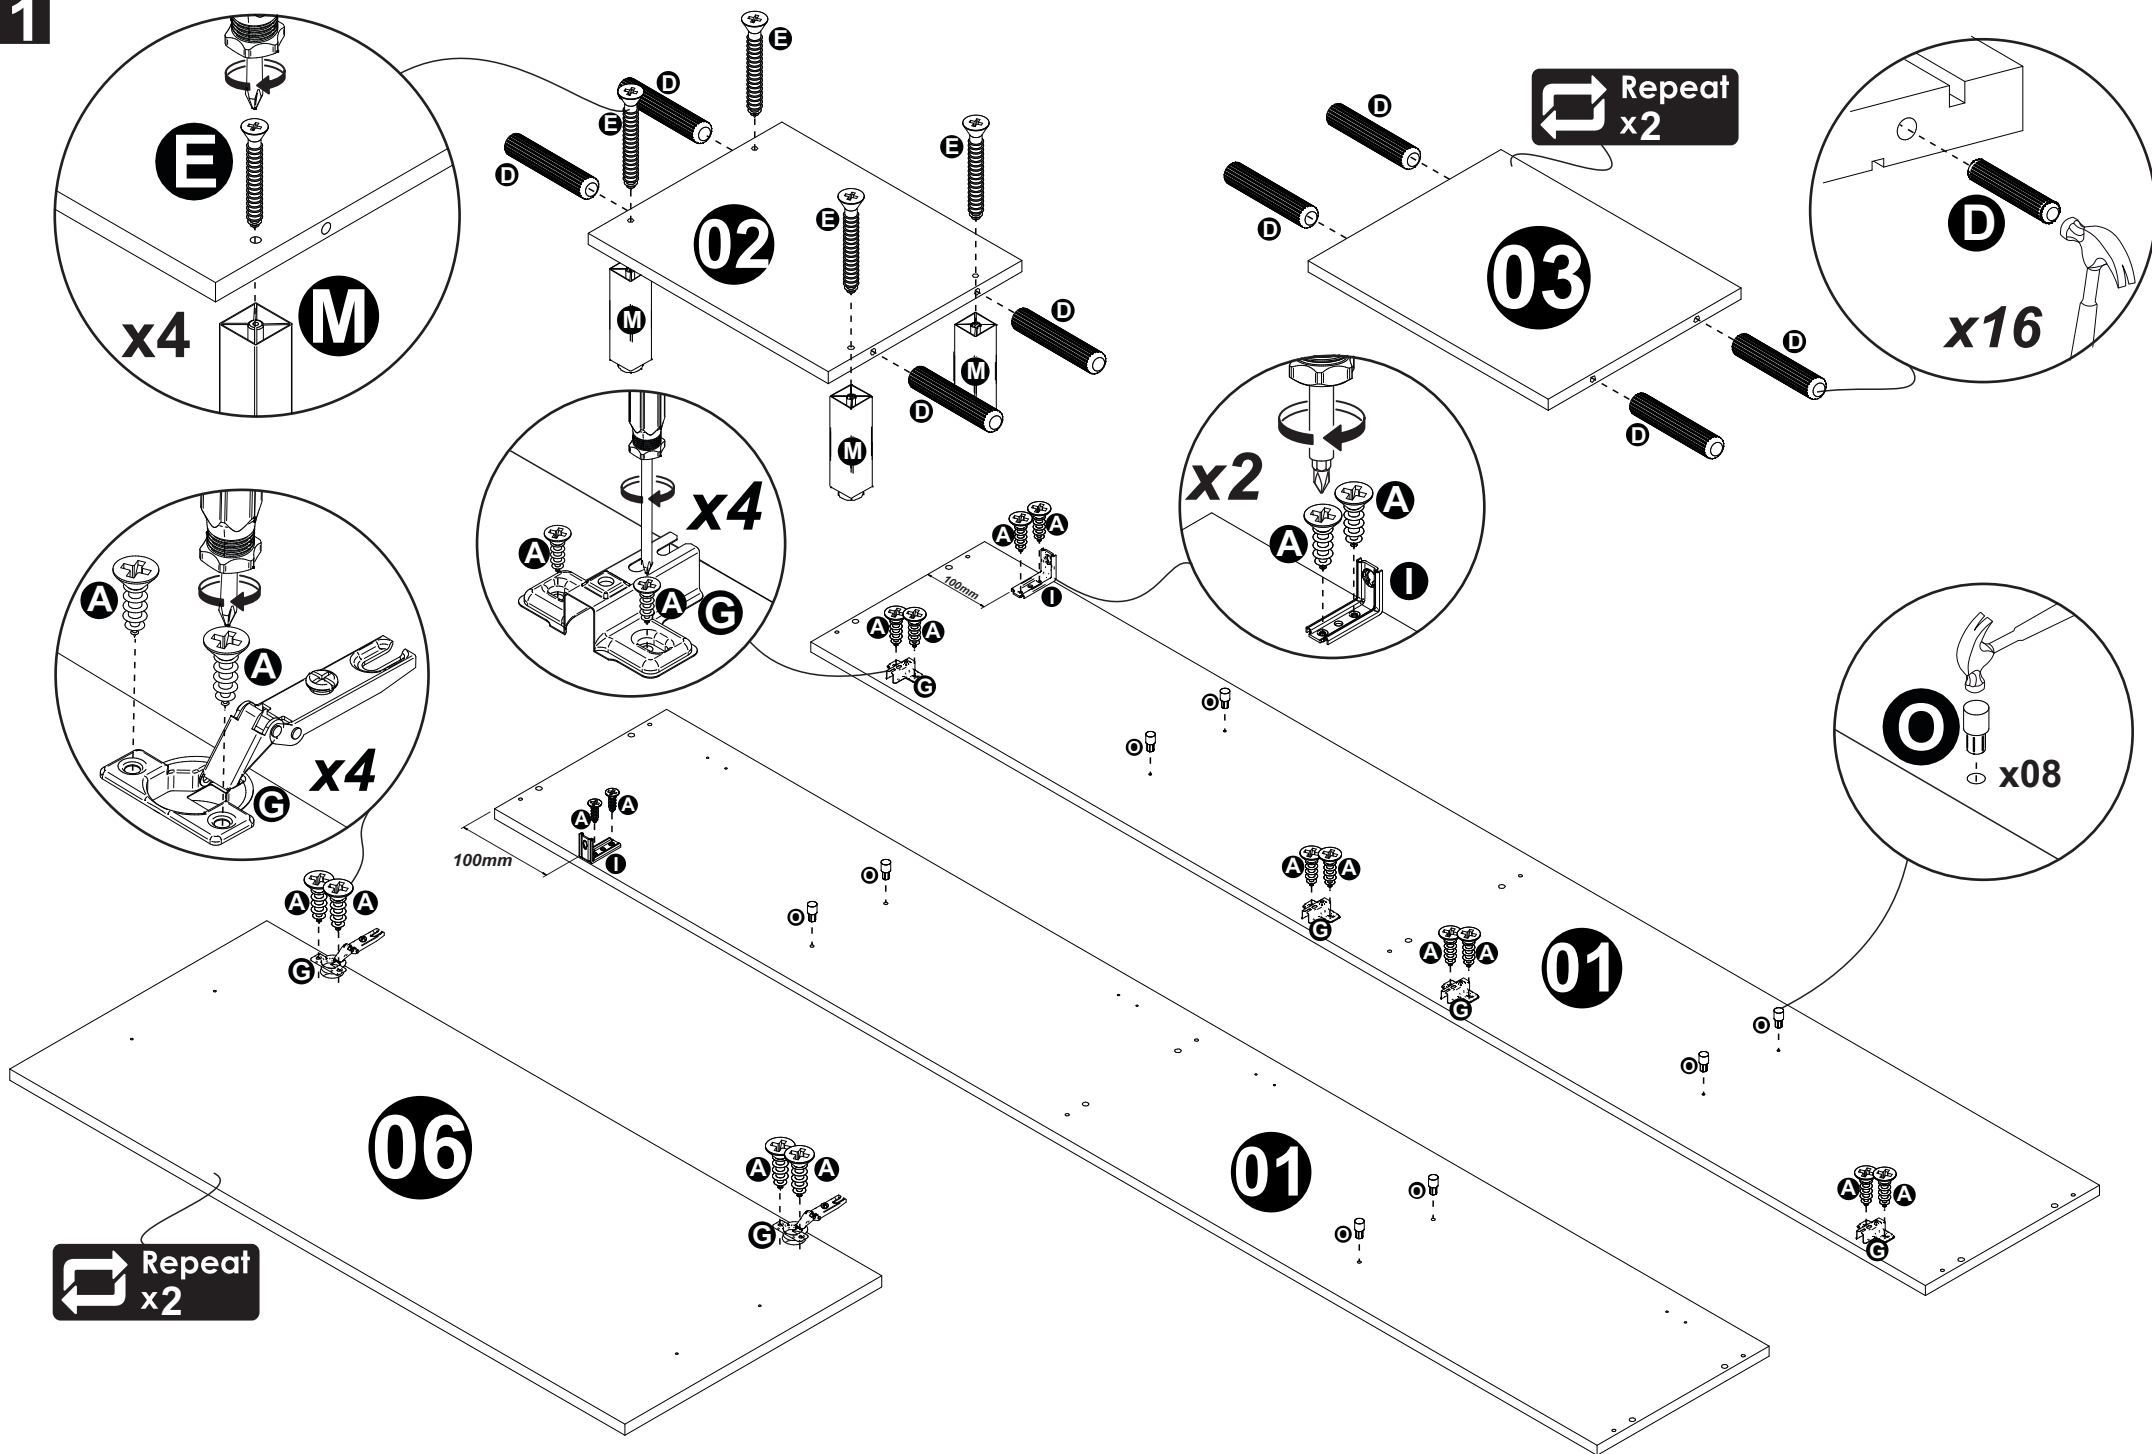

2

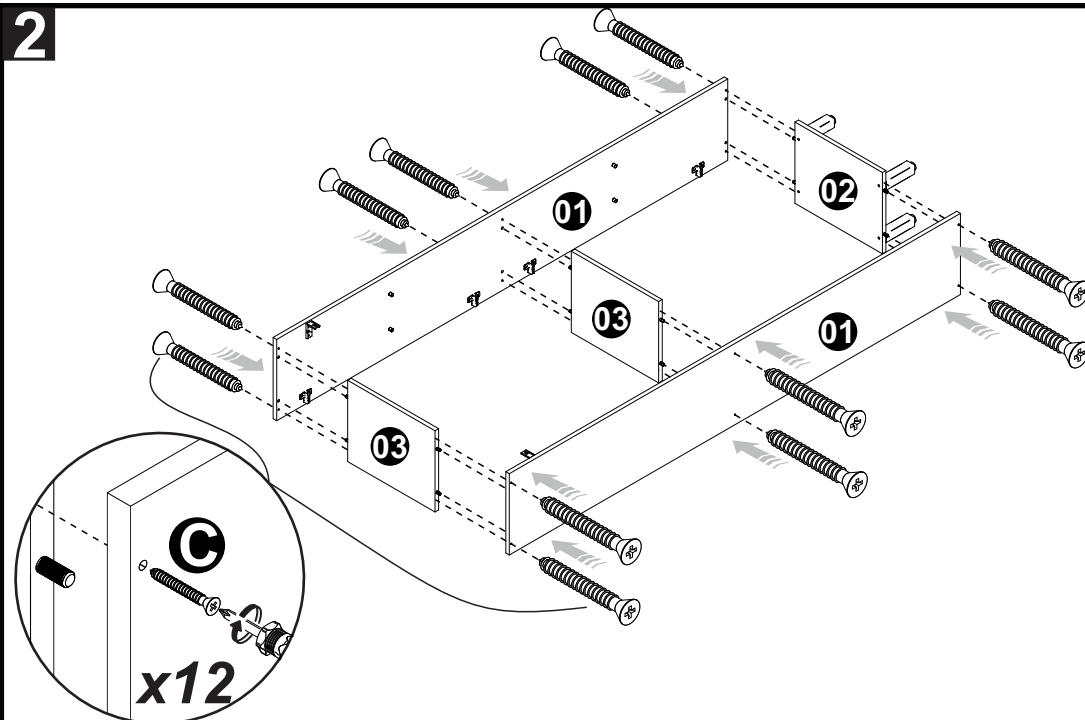


3


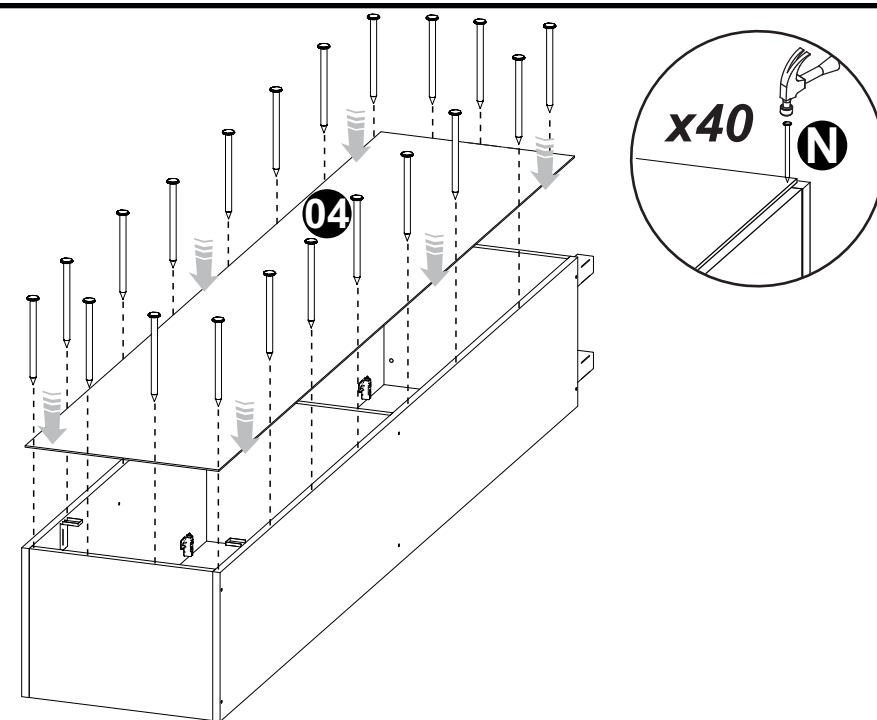


4




Ajuste das Portas- Ajustes de las Puertas- Doors Adjustment

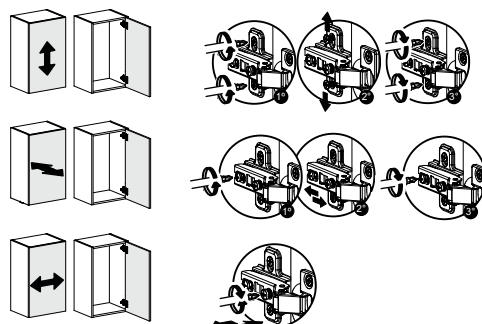

Colocar a dobradiça
sobre o calço. / Place the hinge
on the wedge. / Colocar la bisagra
sobre el calzo.

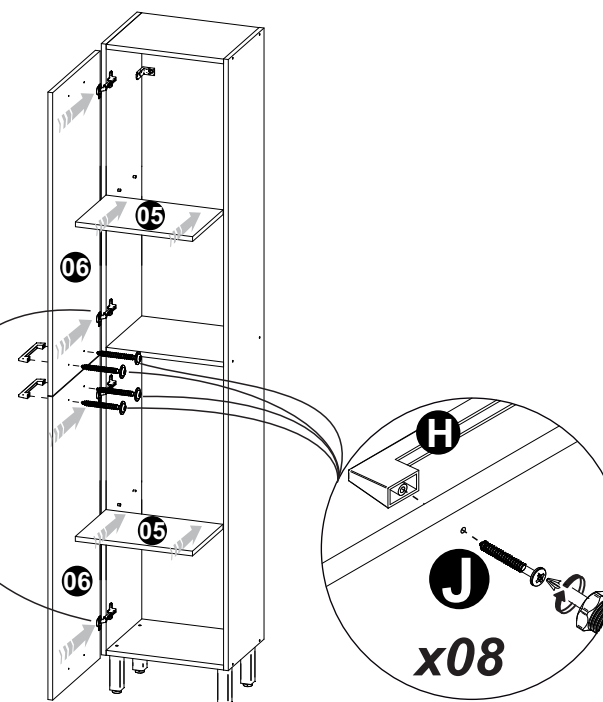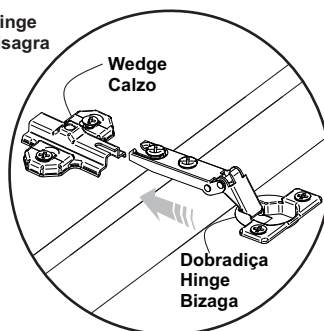

5

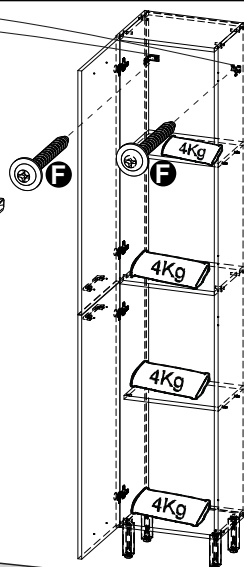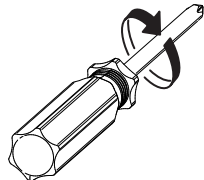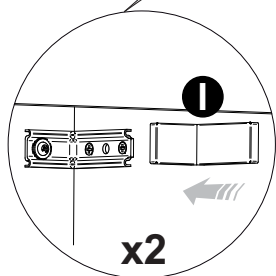Broca ø 8mm
Drill ø 8mm