

BE - 1003

Instruções de Montagem Assembly Instructions Instrucciones de Armado

Acesse Vídeos de Montagens
Access Mounting Videos
Acceder a los Vídeos de Montaje
www.tecnomobili.ind.br

tecnomobili

Estrada RSC 453, Km s/n° | Garibaldi | RS
CEP: 95720-000 | Fone / Fax: 54.3464.2050
sac@moveisvideira.com.br

Notas Especiais:

01 -Examine completamente todas as peças do móvel antes de começar o trabalho.

02 -Recomenda-se montar o móvel conforme este Manual de Montagem.

03 -É de responsabilidade do montador seguir as instruções do Manual de Montagem, que são fundamentais para garantir a estrutura do móvel.

04 -Para limpeza, utilizar somente pano úmido e sabão neutro.

Special notes:

01 -Check all parts of the unit thoroughly before starting work.

02 -It is recommended to assemble the furniture according to this Installation Manual.

03 -It is the responsibility of the assembler to follow the instructions in the Assembly Manual, which are essential to ensure the structure of the furniture.

04 -For cleaning use only damp cloth and neutral soap.

Notas especiales:

01 -Examine completamente todas las piezas del mueble antes de iniciar el trabajo.

02 -Se recomienda montar el mueble conforme el Manual de Ensamblaje.

03 -Es de responsabilidad del montador seguir las instrucciones del Manual de Ensamblaje, que son fundamentales para garantizar la estructura del mueble.


04 -Para limpieza solamente usar trapo húmedo y jabón neutro.

Garante certificate:

The guarantee of products manufactured by Móveis Videira LTDA covers any defects / manufacturing defects, within the period established by the Consumer Protection Code, in its Article 26, II, which provides for a legal guarantee of ninety (90) days.

Lista de Peças / List of pieces / Lista de piezas


CÓD	DESCRIÇÃO	DESCRIPTION	DESCRIPCION	QTD	RAW MATERIAL	DIMENSION	CÓD
01	Lateral	Side	Lateral	1	MDP 15mm	680x800x15	301001
02	Grade	Rail	Rejilla	2		1300x550x22	7012
03	Suporte de Lastro Madeira	Wooden Ballast Support	Suporte de Lastre Madera	2	Madeira	1302x43x20	
04	Costa Comoda	Commode Back	Costa Cómoda	1	MDP 15mm	800x680x15	431003
05	Lateral Direita	Left Side	Lateral Derecha	1	MDP 15mm	680x317x15	331003
06	Rodapé	Baseboard	Rodapie	1	MDP 15mm	400x70x15	801003
07	Tampo Gaveta	Drawer Top	Tapa Cajón	1	MDP 15mm	400x317x15	721003
08	Lateral Esquerda	Right Side	Lateral Izquierda	1	MDP 15mm	680x317x15	321003
09	Prateleira Esquerda	Right Shelf	Estante Izquierda	2	MDP 15mm	159x316x15	201003
10	Tampo Superior	Upper Top	Tapa Superior	1	MDP 15mm	598x359x15	711003
11	Frente Gaveta	Drawer Front	Delante de Cajón	2	MDP 15mm	420x204x15	81003
12	Lateral Gaveta	Drawer Side	Lateral de Cajón	4	MDP 15mm	300x140x15	304102
13	Fundo Gaveta	Drawer Botton	Fundo de Cajón	2	MDF 3mm	353x308x03	421003
14	Costa Gaveta	Drawer Back	Costa de Cajón	2	MDP 15mm	375x140x15	411003
15	Lastro Madeira	Wood Ballast	Lastre Madera	10	Madeira	550x44x8	6448

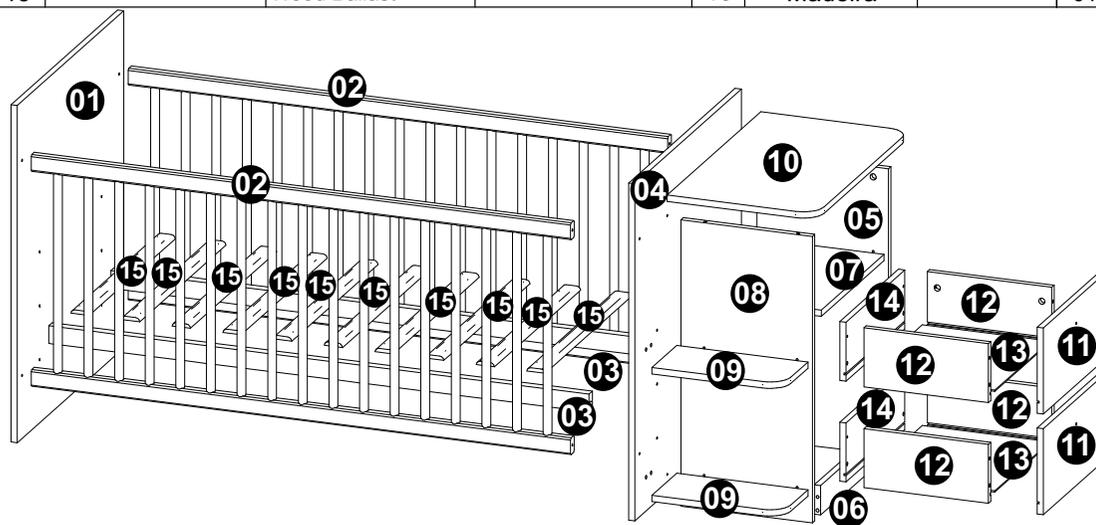

REF DESCRIPTION QTDCÓD

A		3,5 x 12mm CC	04	0423
B		4,0 x 50mm CC	12	
C		43 x 43 x 21mm Ponteira Lateral	04	
D		47 x 24 x 10mm Ponteira Grade	08	
E		14 x 4mm Sapata Deslizadora	08	8112
F		22 x 3mm Prego 10 x 10	28	3051
G		Adesivo Tapa-Furo	17	
H		Puxador Bola	02	
I		34 x 7mm Parafuso Minifix	24	3771
J		15 x 12mm Tambor Minifix	24	9516
K		Cavilha 8 x 30mm	16	2806
L		3,5 x 14mm CC	08	3639
M		3,5 x 30mm CP	02	9517
N		3,5 x 14mm CF	08	3759
O		Bigffer Corrediza 300mm	02	7312


Ferramentas | Tools | Herramientas







90min.


Review: 02
Date: 23/09/2022

Use the ruler below to measure the components Measured in mm

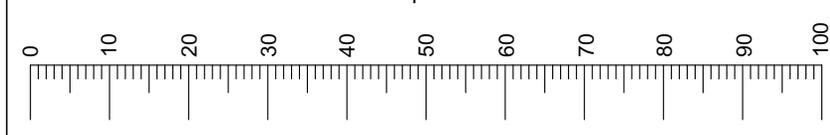


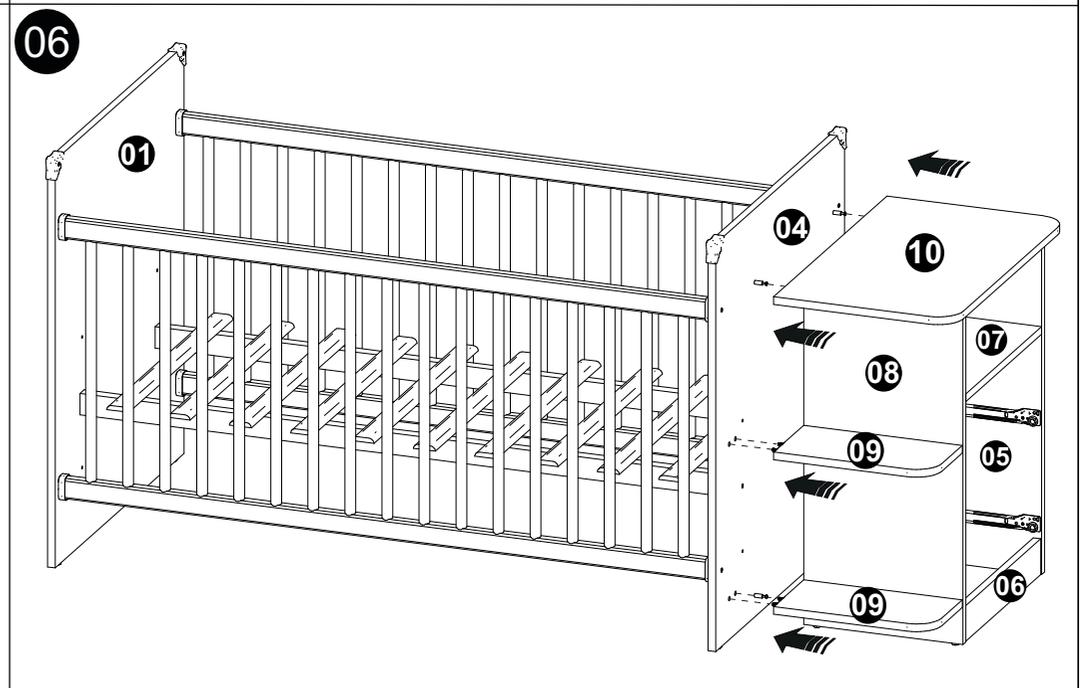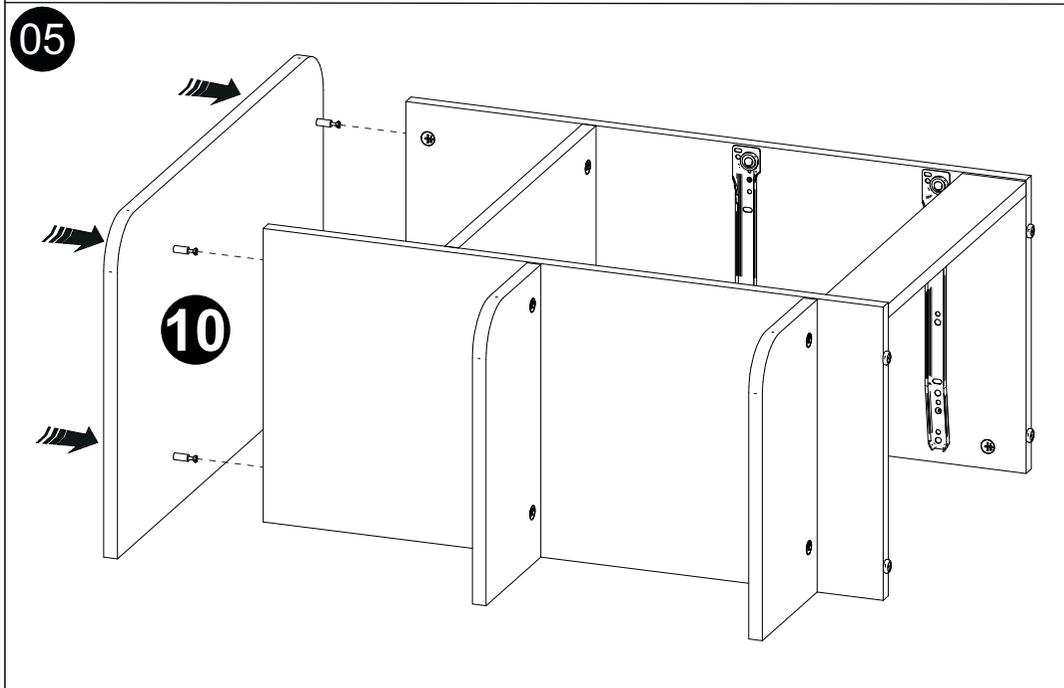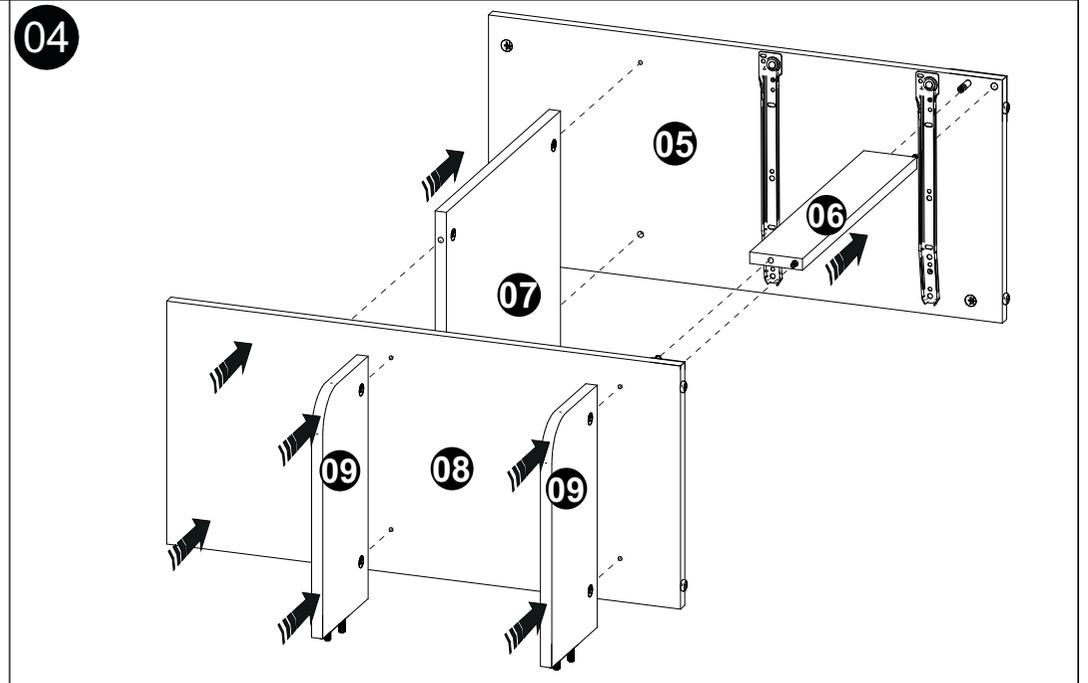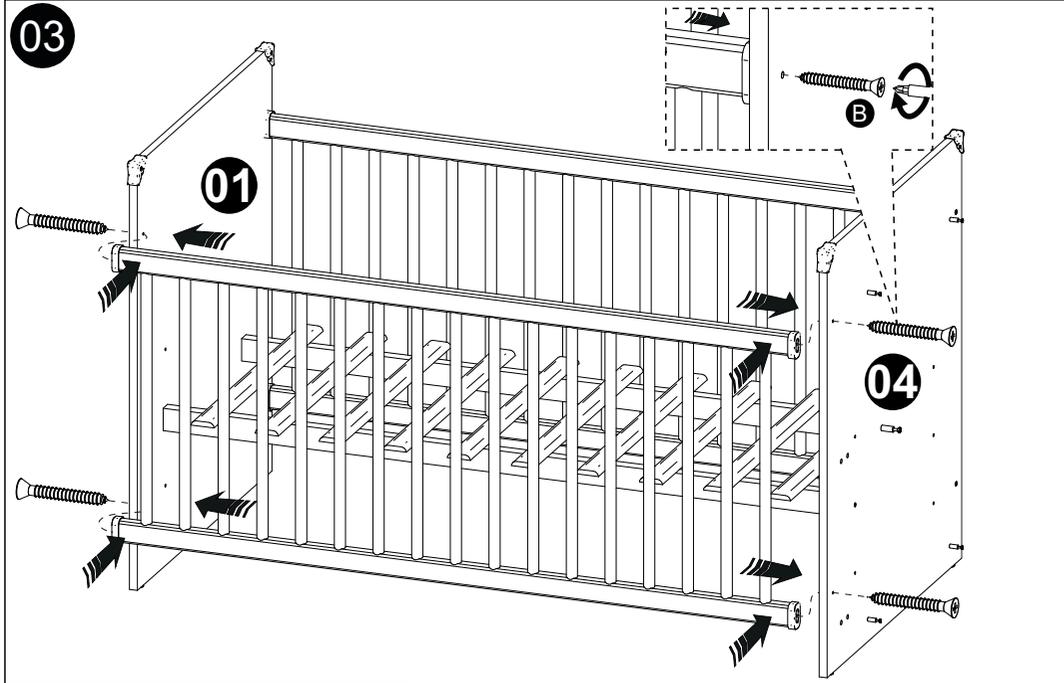

07

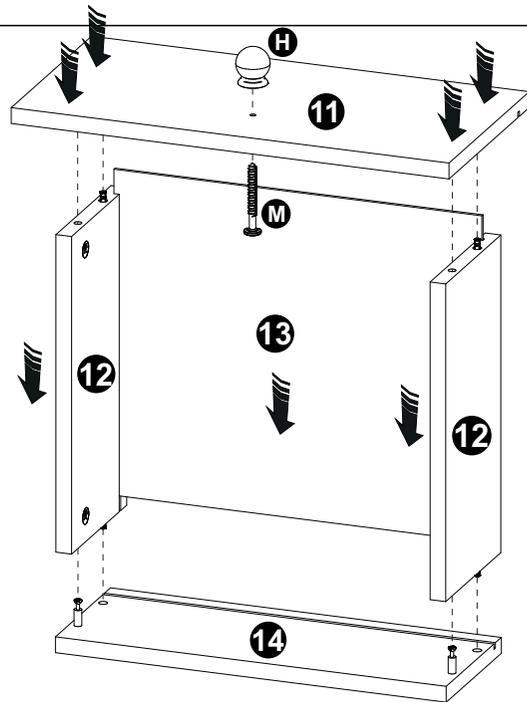

08

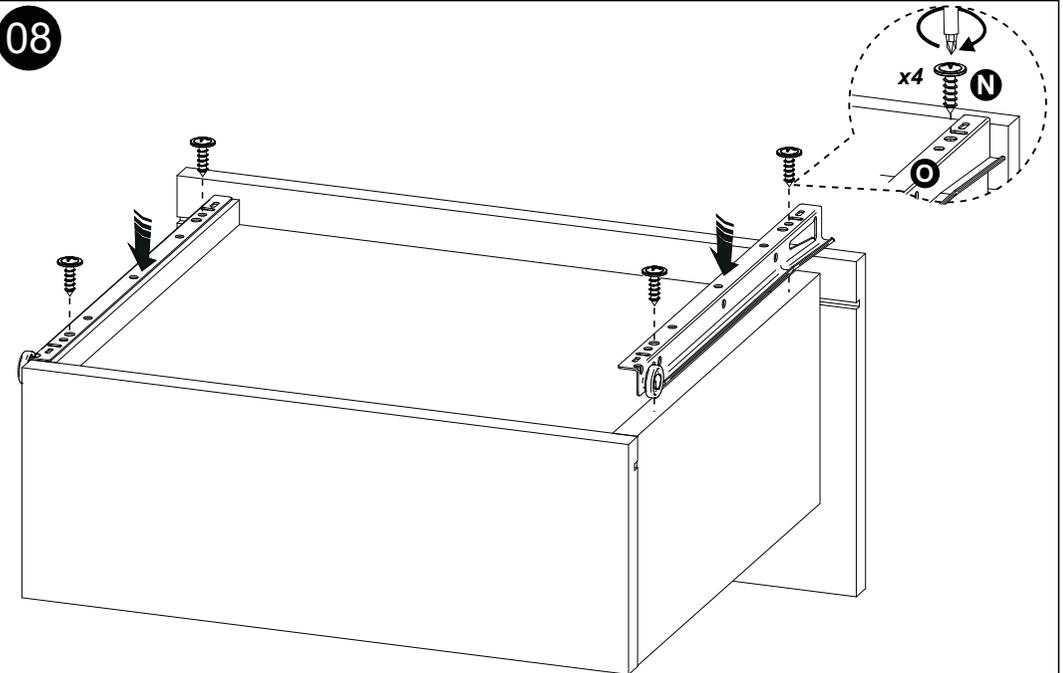

09

