

Floor-standing cabinet

A		KD fitting (A)	24	step1: Ax2 Bx8 Cx4 	step2: Ax7 Bx4 Cx1 Hx2 Ix8 Ex4
B		KD fitting (B)	24		
C		Wood Shaw	10		
D		KD screw(48mm)	2		
E		Screw.M6x4	8		
F		Full overlay hinge	4	step3: Ax4 Cx2 	step4: Ax4 Bx4 Cx2
G		Screw.M4x14	8		
H		Lamination bracket	4		
I		hole cover	16		
J		handle	2		
k		handle screw	2		




Floor-standing cabinet

2 OF 2


step5:

Bx4
Dx2

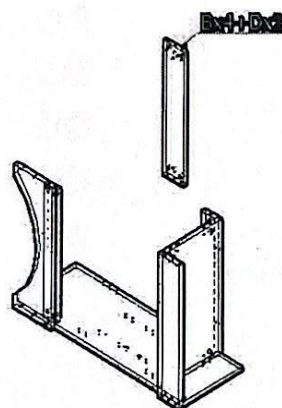


step6:

Ax7
Bx4
Cx1
Hx2
Ix8
Ex4

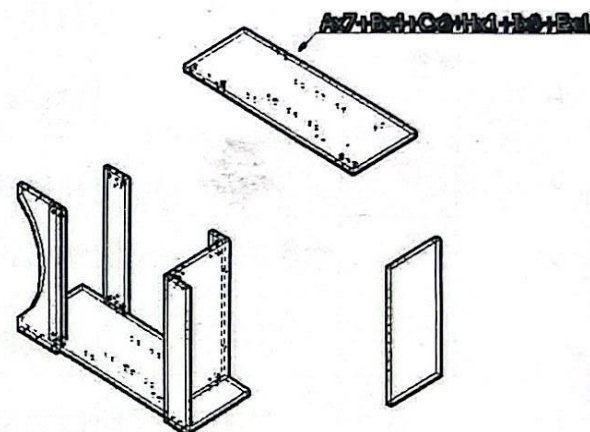

step7:

Fx4
Gx8
Jx2
Kx2

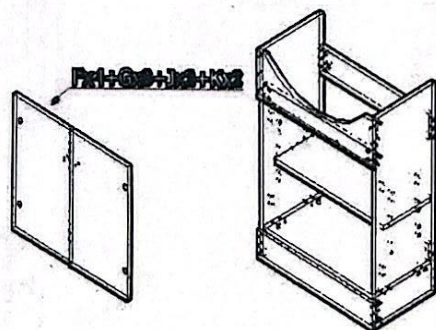

step8:

