

Floor-standing cabinet

A		KD fitting (A)	24
B		KD fitting (B)	24
C		Wood Shaw	10
D		KD screw(48mm)	2
E		Screw.M6x4	8
F		Full overlay hinge	4
G		Screw.M4x14	8
H		Lamination bracket	4
I		hole cover	16
J		handle	2
k		handle screw	2

step1:

Ax2
Bx8
Cx4

step2:

Ax7
Bx4
Cx1
Hx2
Ix8
Ex4

step3:

Ax4
Cx2

step4:

Ax4
Bx4
Cx2




Floor-standing cabinet

2 OF 2


step5:

Bx4
Dx2

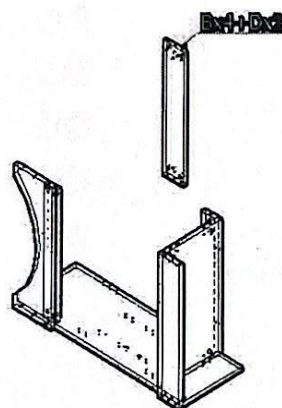


step6:

Ax7
Bx4
Cx1
Hx2
Ix8
Ex4

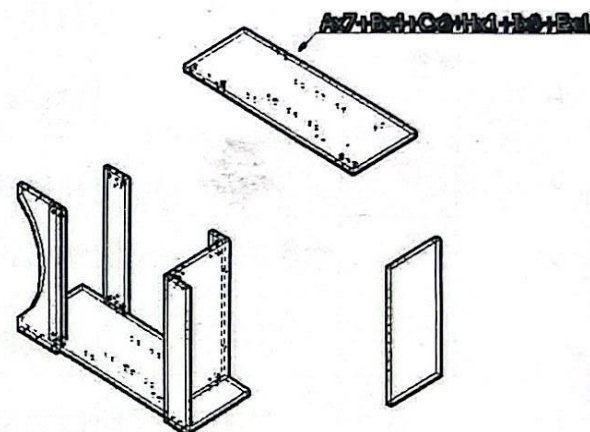

step7:

Fx4
Gx8
Jx2
Kx2

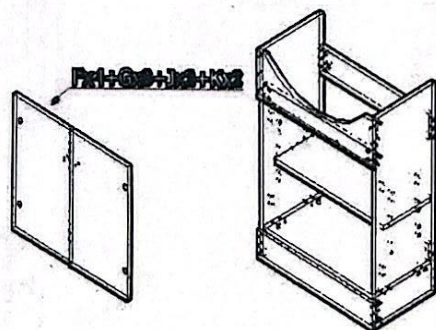

step8:

