


Side Cabine

1 OF1

A		KD fitting (A)	20
B		KD fitting (B)	20
C		Wood Shaw	8
D		KD screw(48mm)	5
E		Screw.M6x4	8
F		Full overlay hinge	4
G		Screw.M4x14	20
H		Lamination bracket	4
I		hole cover	16
J		Angular Code	2


step1:

Ax4
Bx20
Cx8
Dx5

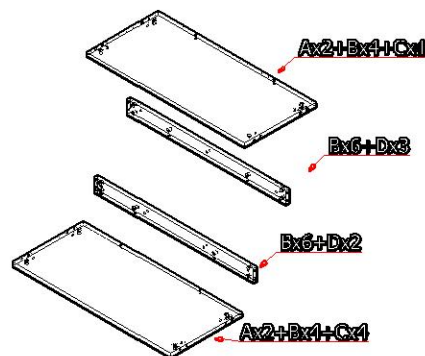


step2:

Ax16
Ex8
Hx4
Ix16

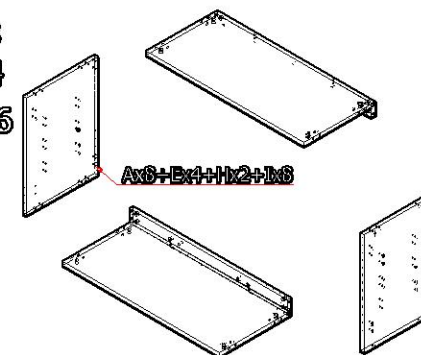

step3:

Fx4
Gx20
Jx2

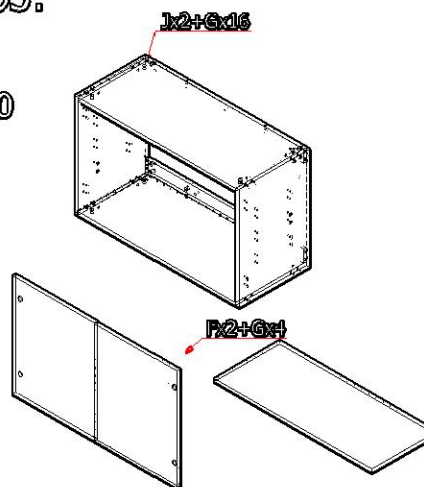

step4:

